

# S

**S1~S18**

Index Descriptions of the products described in this book are listed in alphabetic order.

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
<b>Numeric</b>		
16E% A○○	J12, J14	Insert (Threading) / TF series
16E% AG○○	J12, J14	Insert (Threading) / TF series
16E% G○○	J12, J14	Insert (Threading) / TF series
16E% A○○-TF	J12, J14	Insert (Threading) / TF series
16E% AG○○-TF	J12, J14	Insert (Threading) / TF series
16E% G○○-TF	J12, J14	Insert (Threading) / TF series
16E% ○○BSPT	J10	Insert (Threading)
16E% ○○BSPT-TF	J10	Insert (Threading) / TF series
16E% ○○BSPT-TS	J10	Insert (Threading)
16E% ○○NPT	J10	Insert (Threading)
16E% ○○UN	J8	Insert (Threading)
16E% ○○UN-TF	J8	Insert (Threading) / TF series
16E% ○○W	J8	Insert (Threading)
16E% ○○W-TF	J8	Insert (Threading) / TF series
16E% ○○W-TS	J8	Insert (Threading)
16E% ○○○ISO	J6	Insert (Threading)
16E% ○○○ISO-M02	J6	Insert (Threading)
16E% ○○○ISO-TF	J6	Insert (Threading) / TF series
16E% ○○○ISO-TS	J6	Insert (Threading)
16E% ○○○TR	J14	Insert (Threading)
16E% ○○○○	J12	Insert (Threading)
16E% ○○○○-TS	J12	Insert (Threading)
22E% N○○	J12, J14	Insert (Threading)
22E% ○○○ISO	J6	Insert (Threading)
22E% ○○○TR	J14	Insert (Threading)
22E% ○○UN	J8	Insert (Threading)
06I% ○○○○(○)	J13, J15	Insert (Threading)
08I% ○○○○(○)	J13, J15	Insert (Threading)
11I% A○○	J13, J15	Insert (Threading)
11I% ○○BSPT	J11	Insert (Threading)
11I% ○○BSPT-TF	J11	Insert (Threading) / TF series
11I% ○○BSPT-TS	J11	Insert (Threading)
11I% ○○○ISO	J7	Insert (Threading)
11I% ○○○ISO-TF	J7	Insert (Threading) / TF series
11I% ○○○○	J13, J15	Insert (Threading)
16I% A○○	J13, J15	Insert (Threading)
16I% AG○○	J13, J15	Insert (Threading)
16I% G○○	J13, J15	Insert (Threading)
16I% ○○BSPT	J11	Insert (Threading)
16I% ○○BSPT-TF	J11	Insert (Threading) / TF series
16I% ○○BSPT-TS	J11	Insert (Threading)
16I% ○○NPT	J11	Insert (Threading)
16I% ○○UN	J9	Insert (Threading)
16I% ○○UN-TF	J9	Insert (Threading) / TF series
16I% ○○W	J9	Insert (Threading)
16I% ○○W-TF	J9	Insert (Threading) / TF series
16I% ○○W-TS	J9	Insert (Threading)
16I% ○○○ISO	J7	Insert (Threading)
16I% ○○○ISO-TF	J7	Insert (Threading) / TF series
16I% ○○○ISO-TS	J7	Insert (Threading)
16I% ○○○TR	J15	Insert (Threading)
16I% ○○○○(○)	J13, J15	Insert (Threading)
16I% ○○○○(○)-TS	J13	Insert (Threading)
22I% N○○	J13, J15	Insert (Threading)
22I% ○○UN	J9	Insert (Threading)
22I% ○○○ISO	J7	Insert (Threading)
22I% ○○○TR	J15	Insert (Threading)
3AESL ○○○-○○○-○○	L43	Solid End Mill
3AESM ○○○-○○○-○○	L42	Solid End Mill
5DEKM ○○○-○○○-○○	L37	Solid End Mill
5DERM ○○○-○○○-○○-R○○○	L37	Solid End Mill
2FEKM ○○○-○○○-○○	L18	Solid End Mill
4FEKM ○○○-○○○-○○	L19	Solid End Mill
2FEKS ○○○-○○○-○○	L17	Solid End Mill
2FESL ○○○-○○○-○○	L15	Solid End Mill
2FESM ○○○-○○○-○○	L13, L14	Solid End Mill
2FESS ○○○-○○○-○○	L12	Solid End Mill
2FESW ○○○-○○○-○○(A)	L10	Solid End Mill (for Automatic Lathe)
3FESW ○○○-○○○-○○(A)	L10	Solid End Mill (for Automatic Lathe)
4FESW ○○○-○○○-○○	L11	Solid End Mill (for Automatic Lathe)
4FESM ○○○-○○○-○○	L16	Solid End Mill
3NFSL ○○○-○○○-○○	L41	Solid End Mill

Description	Page	Category
3NESM ○○○-○○○-○○	L39	Solid End Mill
6PDRS ○○○-○○○-○○	L32	Solid End Mill
4PGRM ○○○-○○○-○○-R○○○	L27	Solid End Mill
4YEBM ○○○-○○○-○○	L38	Solid End Mill
4YECM ○○○-○○○-○○-C○○	L35	Solid End Mill
4YEKM ○○○-○○○-○○	L35	Solid End Mill
4YERM ○○○-○○○-○○-R○○○	L35	Solid End Mill
2UEBS ○○○-○○○-○○	L21	Solid End Mill
3UEBS ○○○-○○○-○○	L22	Solid End Mill
3UFSM ○○○-○○○-○○	L20	Solid End Mill
○HFMS ○○○-○○○-○○	L26	Solid End Mill
○HFSS ○○○-○○○-○○	L25	Solid End Mill
○NFMS ○○○-○○○-○○	L40	Solid End Mill
○PGSL ○○○-○○○-○○	L30	Solid End Mill
○PGSM ○○○-○○○-○○	L29	Solid End Mill
○PGSS ○○○-○○○-○○	L28	Solid End Mill
○RDSL ○○○-○○○-○○	L24	Solid End Mill
○RDMS ○○○-○○○-○○	L23	Solid End Mill
○RFRS ○○○-○○○-○○-R○○○	L34	Solid End Mill
○RFSM ○○○-○○○-○○	L33	Solid End Mill
○UGSM ○○○-○○○-○○	L31	Solid End Mill
○YFSM ○○○-○○○-○○	L36	Solid End Mill
556C%L	D23, P8	Spare Parts (Shim)

<b>A</b>			
A63-WH- BL○○○-○○(○)	N12	Blank Tool (HSK Tooling) / Previous Description	
A63-WH- C○○-○○(○)	N11	Toolholder (HSK Tooling) / Previous Description	
A63-WH- KGBA%-16	N10	Grooving (HSK Tooling) / Previous Description	
A63-WH- KGBA%-22-○○	N10	Grooving (HSK Tooling) / Previous Description	
A63-WH- KTRN-○○	N10	Threading (HSK Tooling) / Previous Description	
A63-WH- N○○-○○(○)	N11	Toolholder (HSK Tooling) / Previous Description	
A63-WH- PCLN%-DX12	N6	Toolholder (HSK Tooling) / Previous Description	
A63-WH- PCMNN-□12	N6	Toolholder (HSK Tooling) / Previous Description	
A63-WH- PDJN%-DX15	N6	Toolholder (HSK Tooling) / Previous Description	
A63-WH- PDNNN-□15	N7	Toolholder (HSK Tooling) / Previous Description	
A63-WH- PTGN%-DX16	N7	Toolholder (HSK Tooling) / Previous Description	
A63-WH- PWLN%-DX08	N8	Toolholder (HSK Tooling) / Previous Description	
A63-WH- S2525%-105	N4	Toolholder (HSK Tooling) / Previous Description	
A63-WH- SVLB%-DX16	N9	Toolholder (HSK Tooling) / Previous Description	
A63-WH- SVVBN-□16	N9	Toolholder (HSK Tooling) / Previous Description	
A63-WH- WTENN-□16	N7	Toolholder (HSK Tooling) / Previous Description	
A63-WH- WWMNN-□08	N8	Toolholder (HSK Tooling) / Previous Description	
A○○- PCLN%-○○-○○	F66	Boring Bar	
A○○- PDUN%-○○-○○	F67	Boring Bar	
A○○- PTUN%-○○-○○	F68	Boring Bar	
A○○- PWLN%-○○-○○	F69	Boring Bar	
A○○- SCLC%-○○-○○E	F50	Boring Bar	
A○○- SCLC%-○○-○○AE	F25	Boring Bar (Dynamic Bar)	
A○○- SCLP%-○○-○○AE	F27	Boring Bar (Dynamic Bar)	
A○○- SCLP%-○○-○○E	F50	Boring Bar	
A○○- SDQC%-○○-○○AE	F30	Boring Bar (Dynamic Bar)	
A○○- SDUC%-○○-○○AE	F29	Boring Bar (Dynamic Bar)	
A○○- SDZC%-○○-○○AE	F31	Boring Bar (Dynamic Bar)	
A○○- STLC%-○○-○○AE	F34	Boring Bar (Dynamic Bar)	
A○○- STLP%-○○-○○AE	F33	Boring Bar (Dynamic Bar)	
A○○- STUP%-○○-○○E	F56	Boring Bar	
A○○- SVJB%-○○-○○AE	F37	Boring Bar (Dynamic Bar)	
A○○- SVJC%-○○-○○AE	F37	Boring Bar (Dynamic Bar)	
A○○- SVJP%-○○-○○AE	F37	Boring Bar (Dynamic Bar)	
A○○- SVPB%-○○-○○AE	F37	Boring Bar (Dynamic Bar)	
A○○- SVPC%-○○-○○AE	F37	Boring Bar (Dynamic Bar)	
A○○- SVUB%-○○-○○AE	F39	Boring Bar (Dynamic Bar)	
A○○- SVUC%-○○-○○AE	F39	Boring Bar (Dynamic Bar)	
A○○- SVZB%-○○-○○AE	F39	Boring Bar (Dynamic Bar)	
A○○- SVZC%-○○-○○AE	F39	Boring Bar (Dynamic Bar)	
A○○- SWUB%-○○-○○AE	F41	Boring Bar (Dynamic Bar)	
A○○- SWUP%-○○-○○AE	F41	Boring Bar (Dynamic Bar)	
AABSR ○○○○□-○○F	E8	Toolholder (Turning)	
AABWR ○○○○□-○○F	E9, E10	Toolholder (Turning)	
ABS ○○R○○○○	B72	Insert (Turning)	
ABS ○○R○○○○M	B72	Insert (Turning)	
ABW ○○%○○○○	B72	Insert (Turning)	
ABW ○○R○○○○M	B72	Insert (Turning)	
ACLCL% ○○○○□-○○F	E11	Toolholder (Turning)	
AD○○□	F45	Boring Bar (AD Bar Adapter)	
ADJC% ○○○○□-○○F	E14	Toolholder (Turning)	
ADNC% ○○○○□-○○F	E20	Toolholder (Turning)	
AJ- ○x○○(-○○)	K11	Spare Parts (Adjusting Screw / Chamfering Attachment)	
AJ-412	M25	Spare Parts (Adjusting screw)	
AP-1416	M112, M113	Spare Parts (Cam Pin)	
AP-1820	M112, M113	Spare Parts (Cam Pin)	
APKT ○○○○(○○)PDER-V	M17	Insert (Milling)	
APMT ○○○○○○E%-NB○	M17	Insert (Milling)	
APMT ○○○○○○ER-NBOP	M17	Insert (Milling)	
AVJB% ○○○○□-○○F	E24	Toolholder (Turning)	
AVVB% ○○○○□-○○F	E23	Toolholder (Turning)	
<b>B</b>			
BCS -○	H19, P14	Spare Parts (Clamp Set)	
BDGT ○○○○○○FR-JA	M16	Insert (Milling)	
BDMT ○○○○○○ER-JS	M16	Insert (Milling)	
BDMT ○○○○○○ER-JT	M16	Insert (Milling)	
BDMT ○○○○○○ER-N○	M17	Insert (Milling)	
BDMT ○○○○○○FR	C27, M21	Insert (Milling)	
BGIAR ○○-○	G48	Blade (Grooving)	

Description	Page	Category
BH3X6	F74, P2	Spare Parts (Bolt)
BH3X12	D33, D34, D35, F74, P2	Spare Parts (Bolt)
BH6X25	G11, P2	Spare Parts (Bolt)
BH8X30	G26, P2	Spare Parts (Bolt)
<b>C</b>		
C○○□- SCLC%○○-○○	F49	Boring Bar
C○○□- SCLC%○○-○○A	F25	Boring Bar (Dynamic Bar)
C○○□- SCLP%○○○○	F49	Boring Bar
C○○□- SCLP%○○-○○-○/○	F49	Boring Bar
C○○□- SDUC%○○-○○	F51	Boring Bar
C○○□- SJLC%○○-○○○	F53	Boring Bar
C○○□- SJZC%○○-○○○	F53	Boring Bar
C○○□- STLB%○○-○○A	F33	Boring Bar (Dynamic Bar)
C○○□- STUB%○○-○○	F55	Boring Bar
C○○□- STUP%○○-○○	F55	Boring Bar
C○○□- STUP%○○-○○-○/○	F55	Boring Bar
C○○□- STXB%○○-○○○	F58	Boring Bar
C○○□- STXP%○○-○○	F58	Boring Bar
C○○□- STZB%○○-○○○	F58	Boring Bar
C○○□- SWUB%○○-○○	F65	Boring Bar
C○○□- SWUB%○○-○○A	F41	Boring Bar (Dynamic Bar)
C○○□- SWUB%○○-○○-○/○	F65	Boring Bar
C○○□- SWUP%○○-○○	F65	Boring Bar
C○○□- SWUP%○○-○○-○/○	F65	Boring Bar
C17R	M41, P13	Spare Parts (Clamp)
C20R	M31, P13	Spare Parts (Clamp)
C25R	M39, P13	Spare Parts (Clamp)
C43R	M28	Spare Parts (Clamp)
C44R	M28	Spare Parts (Clamp)
C90SD ○○○○-12%L	M112, M113	Spare Parts (Cartridge)
C90SP ○○○○-10%L	M112, M113	Spare Parts (Cartridge)
C91R	M40	Spare Parts (Clamp)
C92R	M40	Spare Parts (Clamp)
CB-11	D25, D34, D35, P16	Spare Parts (Chipbreaker)
CB-12	D26, F72, P16	Spare Parts (Chipbreaker)
CB-13	D26, F72, P16	Spare Parts (Chipbreaker)
CB-14	D23, P16	Spare Parts (Chipbreaker)
CB-15	D23, P16	Spare Parts (Chipbreaker)
CB-16	D22, D23, F72 P16	Spare Parts (Chipbreaker)
CB-17	D22, P16	Spare Parts (Chipbreaker)
CB-51	D25, P16	Spare Parts (Chipbreaker)
CB-S3220	E28, P16	Spare Parts (Chipbreaker)
CB-S4220	E28, P16	Spare Parts (Chipbreaker)
CBSN% ○○○○□-○○	D38	Toolholder (Turning)
CBSN% ○○○○B-12-A20	F71	Boring Bar (for Bearing Machining)
CB-T2212	E29, P16	Spare Parts (Chipbreaker)
CB-T3220	E29, P16	Spare Parts (Chipbreaker)
CCET ○○○○○○(○)F%-USF	B48	Insert (Turning)
CCET ○○○○○○(○)MF%-USF	B48	Insert (Turning)
CCET ○○○○○○(○)M%-FSF	B47	Insert (Turning)
CCET ○○○○○○(○)%-FSF	B47	Insert (Turning)
CCGT ○○○○○○	B46, B74	Insert (Turning)
CCGT ○○○○○○AH	B46	Insert (Turning)
CCGT ○○○○○○E%-U	B48, B74	Insert (Turning)
CCGT ○○○○○○FN-Z	B46	Insert (Turning)
CCGT ○○○○○○(○)F%-U	B48, B74	Insert (Turning)
CCGT ○○○○○○(○)M	B46	Insert (Turning)
CCGT ○○○○○○M-CF	B45	Insert (Turning)
CCGT ○○○○○○ME%-U	B48	Insert (Turning)
CCGT ○○○○○○(○)MF	B46	Insert (Turning)
CCGT ○○○○○○MF-GF	B45	Insert (Turning)
CCGT ○○○○○○MFP-GF	B45	Insert (Turning)
CCGT ○○○○○○MF-GQ	B45	Insert (Turning)
CCGT ○○○○○○MFP-GQ	B45	Insert (Turning)
CCGT ○○○○○○(○)MF%-U	B48	Insert (Turning)
CCGT ○○○○○○(○)M%-F	B47	Insert (Turning)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
CCGT ○○○○○○MP-CF	<b>B45</b>	Insert (Turning)
CCGT ○○○○○○%L-A3	<b>B46</b>	Insert (Turning)
CCGT ○○○○○○(○)%L-F	<b>B47, B74</b>	Insert (Turning)
CCGT ○○○○○○(○)%L-FS	<b>B47</b>	Insert (Turning)
CCGW ○○○○○○	<b>B47, C18</b>	Insert (Turning)
CCGW ○○○○○○NE	<b>C18</b>	Insert (Turning)
CCGW ○○○○○○SE	<b>C18</b>	Insert (Turning)
CCLN%L ○○○○○□-○○	<b>D22</b>	Toolholder (Turning)
CCLN%L ○○○○○□-○○A	<b>D32</b>	Toolholder (Turning)
CCLN%L ○○○○○B-○○A	<b>F74</b>	Boring Bar / Previous Description
CCLN%L ○○○○○□-○○GX	<b>D28</b>	Toolholder (Turning)
CCMT ○○○○○○	<b>B46, B74, C18</b>	Insert (Turning)
CCMT ○○○○○○GK	<b>B45, B74</b>	Insert (Turning)
CCMT ○○○○○○HQ	<b>B45, B74</b>	Insert (Turning)
CCMT ○○○○○○MQ	<b>B46</b>	Insert (Turning)
CCMT ○○○○○○NE	<b>C18</b>	Insert (Turning)
CCMT ○○○○○○SE	<b>C18</b>	Insert (Turning)
CCMW ○○○○○○ME	<b>C10</b>	Insert (Turning) / Previous Description
CCMW ○○○○○○ME-T	<b>C10</b>	Insert (Turning) / Previous Description
CCMW ○○○○○○SE	<b>C10</b>	Insert (Turning) / Previous Description
CCMW ○○○○○○SE-T	<b>C10</b>	Insert (Turning) / Previous Description
CCMW ○○○○○○S○○○○○MET	<b>C10</b>	Insert (Turning)
CCMW ○○○○○○S○○○○○SET	<b>C10</b>	Insert (Turning)
CCMW ○○○○○○T○○○○○ME	<b>C10</b>	Insert (Turning)
CCMW ○○○○○○T○○○○○ME	<b>C10</b>	Insert (Turning)
CCMW ○○○○○○T○○○○○SE	<b>C10</b>	Insert (Turning)
CCMW ○○○○○○T○○○○○ME	<b>C10</b>	Insert (Turning) / Previous Description
CCMW ○○○○○○S2E	<b>C10</b>	Insert (Turning) / Previous Description
CCMW ○○○○○○SE	<b>C10</b>	Insert (Turning) / Previous Description
CCMW ○○○○○○SE-T	<b>C10</b>	Insert (Turning) / Previous Description
CCMW ○○○○○○S○○○○○MET	<b>C10</b>	Insert (Turning)
CCMW ○○○○○○S○○○○○SET	<b>C10</b>	Insert (Turning)
CCMW ○○○○○○T○○○○○SE	<b>C10</b>	Insert (Turning)
CCRN%L ○○○○○□-○○A	<b>D32</b>	Toolholder (Turning)
CDHN%L ○○○○○□-○○GX	<b>D29</b>	Toolholder (Turning)
CDJN%L ○○○○○□-○○	<b>D23</b>	Toolholder (Turning)
CDJN%L ○○○○○□-○○GX	<b>D29</b>	Toolholder (Turning)
CE-010	<b>D22, D23, F72, P14</b>	Spare Parts (Clamp Set)
CE-020	<b>D25, D26, D34, D35, P14</b>	Spare Parts (Clamp Set)
CE-030	<b>D27, P14</b>	Spare Parts (Clamp Set)
CE-030A	<b>D25, D27, D32, D33, D34, D35, D36, P14</b>	Spare Parts (Clamp Set)
CE-040	<b>D25, D27, D35, P14</b>	Spare Parts (Clamp Set)
CE-111	<b>G26, P13</b>	Spare Parts (Clamp)
CE-121	<b>G26, P13</b>	Spare Parts (Clamp)
CE-131	<b>G26, P13</b>	Spare Parts (Clamp)
CE-141	<b>G26, P13</b>	Spare Parts (Clamp)
CE-220	<b>D22, D25, P14</b>	Spare Parts (Clamp Set)
CE-320	<b>F72, P14</b>	Spare Parts (Clamp Set)
CE-360S	<b>F74, P14</b>	Spare Parts (Clamp Set)
CE-410	<b>D28, D29, D30, D31, F73, P14</b>	Spare Parts (Clamp Set)
CE-430	<b>D29, P14</b>	Spare Parts (Clamp Set)
CELN%L ○○○○○B-○○	<b>F72</b>	Boring Bar / Previous Description
CELN%L ○○○○○□-○○	<b>D23</b>	Toolholder (Turning)
CGA-3%L	<b>G17, P13</b>	Spare Parts (Clamp)
CGA-4%L	<b>G17, P13</b>	Spare Parts (Clamp)
CGA-5%L	<b>G17, P13</b>	Spare Parts (Clamp)
CGB%L	<b>G11, P13</b>	Spare Parts (Clamp)
CGH-1%L	<b>G16, G45, P13</b>	Spare Parts (Clamp)
CGH-2%L	<b>G16, G45, P13</b>	Spare Parts (Clamp)
CGH-3%L	<b>G16, P13</b>	Spare Parts (Clamp)
CGIA-3R	<b>G48, P13</b>	Spare Parts (Clamp)
CGIA-4R	<b>G48, P13</b>	Spare Parts (Clamp)
CGIA-5R	<b>G48, P13</b>	Spare Parts (Clamp)
CH-20R	<b>M32, M33, P13</b>	Spare Parts (Clamp)
CIN%L ○○○○○S-○○	<b>J17</b>	Toolholder (Threading)
CL63-1	<b>N4, N5, N6, N7, N8, N9, N10, N11, N12, P19</b>	Spare Parts (Coolant Pipe)

Description	Page	Category
CL100-1	<b>N4, N5, N11</b>	Spare Parts (Coolant Pipe)
CNGA ○○○○○○	<b>B17, B81, C5</b>	Insert (Turning)
CNGA ○○○○○○ME	<b>C5</b>	Insert (Turning) / Previous Description
CNGA ○○○○○○ME-T	<b>C5</b>	Insert (Turning) / Previous Description
CNGA ○○○○○○MEW	<b>C5</b>	Insert (Turning) / Previous Description
CNGA ○○○○○○SE	<b>C5</b>	Insert (Turning) / Previous Description
CNGA ○○○○○○SE-T	<b>C5</b>	Insert (Turning) / Previous Description
CNGA ○○○○○○S○○○○○	<b>B81, C5</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○ME	<b>C5</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○MET	<b>C5</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○MEW	<b>C5</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○SE	<b>C5</b>	Insert (Turning)
CNGA ○○○○○○S○○○○○SET	<b>C5</b>	Insert (Turning)
CNGA ○○○○○○T○○○○○	<b>B81, C5</b>	Insert (Turning)
CNGA ○○○○○○T○○○○○ME	<b>C5</b>	Insert (Turning)
CNGA ○○○○○○T○○○○○SE	<b>C5</b>	Insert (Turning)
CNGA ○○○○○○T○○○○○	<b>B75</b>	Insert (Turning)
CNGG ○○○○○○AH	<b>B18</b>	Insert (Turning)
CNGG ○○○○○○DP	<b>B14</b>	Insert (Turning)
CNGG ○○○○○○HQ	<b>B14</b>	Insert (Turning)
CNGG ○○○○○○%L	<b>B18, B40</b>	Insert (Turning)
CNGG ○○○○○○%L-25R	<b>B18</b>	Insert (Turning)
CNGG ○○○○○○%L-A3	<b>B18</b>	Insert (Turning)
CNGG ○○○○○○%L-S	<b>B18, B40</b>	Insert (Turning)
CNGG ○○○○○○Z	<b>B18</b>	Insert (Turning)
CNGM ○○○○○○BB○	<b>C5</b>	Insert (Turning) / Previous Description
CNGM ○○○○○○S○○○○○BB○	<b>C5</b>	Insert (Turning)
CNGN ○○○○○○	<b>B81</b>	Insert (Turning)
CNGN ○○○○○○S○○○○○	<b>B81</b>	Insert (Turning)
CNGN ○○○○○○T○○○○○	<b>B81</b>	Insert (Turning)
CNGU ○○○○○○ME%L-U	<b>B38</b>	Insert (Turning)
CNGU ○○○○○○MF%L-F	<b>B38</b>	Insert (Turning)
CNGU ○○○○○○MF%L-U	<b>B38</b>	Insert (Turning)
CNGU ○○○○○○MF-SK	<b>B38</b>	Insert (Turning)
CNGX ○○○○○○T○○○○○	<b>B81</b>	Insert (Turning)
CNMA ○○○○○○	<b>B17, B40, B81</b>	Insert (Turning)
CNMA ○○○○○○S○○○○○	<b>B81</b>	Insert (Turning)
CNMA ○○○○○○T○○○○○	<b>B81</b>	Insert (Turning)
CNMG ○○○○○○	<b>B16, B40</b>	Insert (Turning)
CNMG ○○○○○○AH	<b>B18</b>	Insert (Turning)
CNMG ○○○○○○C	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○CJ	<b>B14</b>	Insert (Turning)
CNMG ○○○○○○CQ	<b>B14, B40</b>	Insert (Turning)
CNMG ○○○○○○CS	<b>B15, B40</b>	Insert (Turning)
CNMG ○○○○○○GC	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○GP	<b>B14, B40</b>	Insert (Turning)
CNMG ○○○○○○GS	<b>B15, B40</b>	Insert (Turning)
CNMG ○○○○○○GT	<b>B15, B40</b>	Insert (Turning)
CNMG ○○○○○○GU	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○HK	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○HQ	<b>B14, B40</b>	Insert (Turning)
CNMG ○○○○○○HS	<b>B15, B40</b>	Insert (Turning)
CNMG ○○○○○○HT	<b>B15, B40</b>	Insert (Turning)
CNMG ○○○○○○HU	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○MQ	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○MS	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○MU	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○PH	<b>B16</b>	Insert (Turning)
CNMG ○○○○○○PS	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○PT	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○TK	<b>B17</b>	Insert (Turning)
CNMG ○○○○○○TN-V	<b>B15</b>	Insert (Turning)
CNMG ○○○○○○WP	<b>B14</b>	Insert (Turning)
CNMG ○○○○○○WQ	<b>B14, B40</b>	Insert (Turning)
CNMG ○○○○○○XP	<b>B16, B40</b>	Insert (Turning)
CNMG ○○○○○○XP-T	<b>B16, B40</b>	Insert (Turning)
CNMG ○○○○○○XQ	<b>B16, B40</b>	Insert (Turning)
CNMG ○○○○○○XS	<b>B16, B40</b>	Insert (Turning)
CNMG ○○○○○○ZS	<b>B17</b>	Insert (Turning)
CNMM ○○○○○○M	<b>C17</b>	Insert (Turning)
CNMM ○○○○○○M-NE	<b>C17</b>	Insert (Turning)
CNMM ○○○○○○M-SE	<b>C17</b>	Insert (Turning)
CNMM ○○○○○○PX	<b>B16</b>	Insert (Turning)
CNMM ○○○○○○	<b>B81, C9</b>	Insert (Turning)
CNMM ○○○○○○S○○○○○	<b>C9</b>	Insert (Turning)

Description	Page	Category
CNMN ○○○○○○T○○○○○	B81	Insert (Turning)
CNMP ○○○○○○TK	B14, B40	Insert (Turning)
CNMU ○○○○○○E-GK	B38	Insert (Turning)
CP-2D	D14	Spare Parts (Clamp)
CP-3D	D8, D10, D12, D20	Spare Parts (Clamp)
CP-5D	D16	Spare Parts (Clamp)
CP-8TE	M41, P13	Spare Parts (Clamp)
CP-8W	M41, P13	Spare Parts (Clamp)
CPGB ○○○○○○	C10	Insert (Turning) / Previous Description
CPGB ○○○○○○OME	C10	Insert (Turning) / Previous Description
CPGB ○○○○○○OME-T	C10	Insert (Turning) / Previous Description
CPGB ○○○○○○SE	C10	Insert (Turning) / Previous Description
CPGB ○○○○○○SE-T	C10	Insert (Turning) / Previous Description
CPGB ○○○○○○S○○○○○MET	C10	Insert (Turning)
CPGB ○○○○○○S○○○○○SET	C10	Insert (Turning)
CPGB ○○○○○○T○○○○○	C10	Insert (Turning)
CPGB ○○○○○○T○○○○○OME	C10	Insert (Turning)
CPGB ○○○○○○T○○○○○SE	C10	Insert (Turning)
CPMB ○○○○○○	B49	Insert (Turning)
CPMH ○○○○○○	B49, B74, C18	Insert (Turning)
CPMH ○○○○○○HQ	B49, B74	Insert (Turning)
CPMH ○○○○○○NE	C18	Insert (Turning)
CPMH ○○○○○○%L-Y	B49, B74	Insert (Turning)
CPMT ○○○○○○GP	B49, B74	Insert (Turning)
CPMT ○○○○○○XP	B49, B74	Insert (Turning)
CPMT ○○○○○○XQ	B49, B74	Insert (Turning)
CP-RC%L	D38, F71, P14	Spare Parts (Clamp Set)
CP8X○○TL	M26, P2	Spare Parts (Screw)
CPS-1	F61, P15	Spare Parts (Clamp Set)
CPS-2	F60, F61, P15	Spare Parts (Clamp Set)
CPS-2P	E28, E29, P15	Spare Parts (Clamp Set)
CPS-2S	M85, P15	Spare Parts (Clamp Set)
CPS-2TR	M82, P15	Spare Parts (Clamp Set)
CPS-3	E28, E29, F60, F61, P15	Spare Parts (Clamp Set)
CPS-4V	G41, P15	Spare Parts (Clamp Set)
CPS-5E	M85, P15	Spare Parts (Clamp Set)
CPS-5F	G41, M132, P15	Spare Parts (Clamp Set)
CPS-5%L	D17, P15	Spare Parts (Clamp Set)
CPS-5S	J16, J17, N10, P15	Spare Parts (Clamp Set)
CPS-5V	G41, G58, G60, G70, P15	Spare Parts (Clamp Set)
CPS-6F	M132, P15	Spare Parts (Clamp Set)
CPS-6M	M27, M31, M39, P15	Spare Parts (Clamp Set)
CPS-6S	J16, J17, N10, P15	Spare Parts (Clamp Set)
CPS-6V	G41, G60, G63, G70, M144, P15	Spare Parts (Clamp Set)
CPS-8V	G60, G63, G70, P15	Spare Parts (Clamp Set)
CRDNN ○○○○□-○○	D27	Toolholder (Turning)
CRDNN ○○○○□-○○A	D33	Toolholder (Turning)
CRSN%L ○○○○□-○○	D27	Toolholder (Turning)
CRSN%L ○○○○□-○○A	D33	Toolholder (Turning)
CS-2D	D14	Spare Parts (Screw)
CS-3D	D8, D10, D12, D20	Spare Parts (Screw)
CS-5D	D16	Spare Parts (Screw)
CSBP%L ○○○○□-○○N	E28	Toolholder (Turning)
CSDNN ○○○○□-○○	D25	Toolholder (Turning)
CSDNN ○○○○□-○○A	D35	Toolholder (Turning)
CSDNN ○○○○□-○○GX	D30	Toolholder (Turning)
CSDPN ○○○○□-○○N	E28	Toolholder (Turning)
CSKN%L ○○○○□-○○	D25	Toolholder (Turning)
CSKN%L ○○○○□-○○A	D34	Toolholder (Turning)
CSKN%L ○○○○B-○○	F72	Boring Bar / Previous Description
CSKN%L ○○○○B-○○A	F74	Boring Bar / Previous Description
CSKN%L ○○○○□-○○GX	D31	Toolholder (Turning)
CSKP%L ○○○○B-○○	F60	Boring Bar / Previous Description
CSKP%L ○○○○□-○○N	E28	Toolholder (Turning)
CS-N%L ○○○○□-○○	D25	Toolholder (Turning)
CS-N%L ○○○○□-○○GX	D31	Toolholder (Turning)

Description	Page	Category
CSRN%L ○○○○□-○○	D25	Toolholder (Turning)
CSRN%L ○○○○□-○○A	D34	Toolholder (Turning)
CSRN%L ○○○○□-○○GX	D30	Toolholder (Turning)
CSSN%L ○○○○□-○○	D25	Toolholder (Turning)
CSSN%L ○○○○□-○○A	D35	Toolholder (Turning)
CSSN%L ○○○○□-○○GX	D30	Toolholder (Turning)
CSSP%L ○○○○□-○○N	E28	Toolholder (Turning)
CSYN%L ○○○○□-○○	D25	Toolholder (Turning)
CSYN%L ○○○○□-○○A	D34	Toolholder (Turning)
CSYN%L ○○○○□-○○GX	D31	Toolholder (Turning)
CT○○○T -45A	K11	Insert (Drilling) / Chamfering
CTFP%L ○○○○□-○○N	E29	Toolholder (Turning)
CTGP%L ○○○○□-○○N	E29	Toolholder (Turning)
CTJN%L ○○○○□-○○	D26	Toolholder (Turning)
CTJN%L ○○○○□-○○A	D36	Toolholder (Turning)
CTTP%L ○○○○□-○○N	E29	Toolholder (Turning)
CTUC%L ○○○○B-○○	F72	Boring Bar / Previous Description
CTUN%L ○○○○B-○○A	F74	Boring Bar / Previous Description
CTUN%L ○○○○□-○○	D26	Toolholder (Turning)
CTUN%L ○○○○□-○○A	D36	Toolholder (Turning)
CTUP%L ○○○○B-○○	F61	Boring Bar / Previous Description
<b>D</b>		
DC ○○○○M-SC	K4, K5, K6	Insert (Drilling)
DC-44	D8	Spare Parts (Shim)
DCET ○○○○○○(○)F%L-JSF	B55	Insert (Turning)
DCET ○○○○○○(○)F%L-USF	B54	Insert (Turning)
DCET ○○○○○○(○)M%L-FSF	B53	Insert (Turning)
DCET ○○○○○○(○)MF%L-JSF	B55	Insert (Turning)
DCET ○○○○○○(○)MF%L-USF	B54	Insert (Turning)
DCET ○○○○○○(○)%L-FSF	B53	Insert (Turning)
DCGT ○○○○○○	B51, B75	Insert (Turning)
DCGT ○○○○○○AH	B55	Insert (Turning)
DCGT ○○○○○○CF	B50, B75	Insert (Turning)
DCGT ○○○○○○CK	B50	Insert (Turning)
DCGT ○○○○○○EN-Z	B75	Insert (Turning)
DCGT ○○○○○○(○)E%L-J	B55	Insert (Turning)
DCGT ○○○○○○E%L-U	B54, B75	Insert (Turning)
DCGT ○○○○○○FN-Z	B52	Insert (Turning)
DCGT ○○○○○○(○)F%L-J	B55	Insert (Turning)
DCGT ○○○○○○(○)F%L-U	B54, B75	Insert (Turning)
DCGT ○○○○○○(○)M	B51	Insert (Turning)
DCGT ○○○○○○(○)ME%L-J	B55	Insert (Turning)
DCGT ○○○○○○ME%L-U	B54	Insert (Turning)
DCGT ○○○○○○(○)MF	B51	Insert (Turning)
DCGT ○○○○○○(○)MF%L-U	B54	Insert (Turning)
DCGT ○○○○○○MF-GF	B50	Insert (Turning)
DCGT ○○○○○○MF-GQ	B51	Insert (Turning)
DCGT ○○○○○○MFP-GF	B50	Insert (Turning)
DCGT ○○○○○○MFP-GQ	B51	Insert (Turning)
DCGT ○○○○○○(○)MF%L-J	B55	Insert (Turning)
DCGT ○○○○○○(○)MF%L-U	B54	Insert (Turning)
DCGT ○○○○○○(○)M%L-F	B53	Insert (Turning)
DCGT ○○○○○○M-CF	B50	Insert (Turning)
DCGT ○○○○○○MP-CF	B50	Insert (Turning)
DCGT ○○○○○○M-CK	B50	Insert (Turning)
DCGT ○○○○○○MP-CK	B50	Insert (Turning)
DCGT ○○○○○○%L-A3	B55	Insert (Turning)
DCGT ○○○○○○(○)%L-F	B53	Insert (Turning)
DCGT ○○○○○○%L-FS	B53	Insert (Turning)
DCGW ○○○○○○	B55	Insert (Turning)
DCLN%L ○○○○□-○○	D8	Toolholder (Turning)
DCMT ○○○○○○	B51, B75, C19	Insert (Turning)
DCMT ○○○○○○GK	B51	Insert (Turning)
DCMT ○○○○○○GP	B50, B75	Insert (Turning)
DCMT ○○○○○○HQ	B51, B75	Insert (Turning)
DCMT ○○○○○○MQ	B52	Insert (Turning)
DCMT ○○○○○○NE	C19	Insert (Turning)
DCMT ○○○○○○SE	C19	Insert (Turning)
DCMT ○○○○○○XP	B52, B75	Insert (Turning)
DCMT ○○○○○○XQ	B52, B75	Insert (Turning)
DCMT ○○○○○○%L-NE	C19	Insert (Turning)
DCMW ○○○○○○	C11	Insert (Turning) / Previous Description
DCMW ○○○○○○ME	C11	Insert (Turning) / Previous Description

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
DCMW ○○○○○○ME-T	C11	Insert (Turning) / Previous Description
DCMW ○○○○○○SE	C11	Insert (Turning) / Previous Description
DCMW ○○○○○○SE-T	C11	Insert (Turning) / Previous Description
DCMW ○○○○○○S○○○○○MET	C11	Insert (Turning)
DCMW ○○○○○○S○○○○○SET	C11	Insert (Turning)
DCMW ○○○○○○T○○○○○	C11	Insert (Turning)
DCMW ○○○○○○T○○○○○ME	C11	Insert (Turning)
DCMW ○○○○○○T○○○○○SE	C11	Insert (Turning)
DD-43	D10	Spare Parts (Shim)
DD-44	D10	Spare Parts (Shim)
DDJN%L ○○○○□-○○○○	D10	Toolholder (Turning)
DDHN%L ○○○○□-○○○○	D10	Toolholder (Turning)
DMC ○○○	M78	Endmill
DMC ○○○H	M79	Endmill
DMC ○○○SX	M78	Endmill
DMC ○○○SXT	M78	Endmill
DMC ○○○SX-○○○	M78	Endmill
DMC ○○○-S○○	M78	Endmill
DNGA ○○○○○○	B82, C6	Insert (Turning)
DNGA ○○○○○○ME	C6	Insert (Turning) / Previous Description
DNGA ○○○○○○ME-T	C6	Insert (Turning) / Previous Description
DNGA ○○○○○○SE	C6	Insert (Turning) / Previous Description
DNGA ○○○○○○SE-T	C6	Insert (Turning) / Previous Description
DNGA ○○○○○○S○○○○○	B82, C6	Insert (Turning)
DNGA ○○○○○○S○○○○○ME	C6	Insert (Turning)
DNGA ○○○○○○S○○○○○MET	C6	Insert (Turning)
DNGA ○○○○○○S○○○○○SE	C6	Insert (Turning)
DNGA ○○○○○○S○○○○○SET	C6	Insert (Turning)
DNGA ○○○○○○T○○○○○	B82, C6	Insert (Turning)
DNGA ○○○○○○T○○○○○ME	C6	Insert (Turning)
DNGA ○○○○○○T○○○○○SE	C6	Insert (Turning)
DNGA ○○○○○○T○○○○○	B82	Insert (Turning)
DNGG ○○○○○○AH	B23	Insert (Turning)
DNGG ○○○○○○DP	B19	Insert (Turning)
DNGG ○○○○○○%L	B23, B41	Insert (Turning)
DNGG ○○○○○○%L-A3	B23	Insert (Turning)
DNGG ○○○○○○%L-S	B23, B41	Insert (Turning)
DNGM ○○○○○○BB○	C6	Insert (Turning)
DNGM ○○○○○○S○○○○○BB○	C6	Insert (Turning)
DNGN ○○○○○○	B82	Insert (Turning)
DNGN ○○○○○○S○○○○○	B82	Insert (Turning)
DNGN ○○○○○○T○○○○○	B82	Insert (Turning)
DNGU ○○○○○○ME%L-U	B39	Insert (Turning)
DNGU ○○○○○○(○)MF%L-F	B39	Insert (Turning)
DNGU ○○○○○○MF%L-U	B39	Insert (Turning)
DNGU ○○○○○○MF-SK	B39	Insert (Turning)
DNGX ○○○○○○T○○○○○	B82	Insert (Turning)
DNMA ○○○○○○	B23, B41	Insert (Turning)
DNMG ○○○○○○	B20, B41	Insert (Turning)
DNMG ○○○○○○AH	B23	Insert (Turning)
DNMG ○○○○○○C	B23	Insert (Turning)
DNMG ○○○○○○CJ	B19	Insert (Turning)
DNMG ○○○○○○CQ	B19, B41	Insert (Turning)
DNMG ○○○○○○CS	B20, B41	Insert (Turning)
DNMG ○○○○○○GC	B23	Insert (Turning)
DNMG ○○○○○○GP	B19, B41	Insert (Turning)
DNMG ○○○○○○GS	B20, B41	Insert (Turning)
DNMG ○○○○○○GT	B20, B41	Insert (Turning)
DNMG ○○○○○○GU	B22	Insert (Turning)
DNMG ○○○○○○HK	B19	Insert (Turning)
DNMG ○○○○○○HQ	B19, B41	Insert (Turning)
DNMG ○○○○○○HS	B20, B41	Insert (Turning)
DNMG ○○○○○○HT	B20, B41	Insert (Turning)
DNMG ○○○○○○HU	B22	Insert (Turning)
DNMG ○○○○○○MQ	B22	Insert (Turning)
DNMG ○○○○○○MS	B22	Insert (Turning)
DNMG ○○○○○○MU	B22	Insert (Turning)
DNMG ○○○○○○PH	B21	Insert (Turning)
DNMG ○○○○○○PS	B20	Insert (Turning)
DNMG ○○○○○○PT	B20	Insert (Turning)
DNMG ○○○○○○%L-ST	B22	Insert (Turning)
DNMG ○○○○○○TK	B22	Insert (Turning)
DNMG ○○○○○○TN-V	B19	Insert (Turning)
DNMG ○○○○○○XP	B21, B41	Insert (Turning)
DNMG ○○○○○○XP-T	B21, B41	Insert (Turning)
DNMG ○○○○○○XQ	B21, B41	Insert (Turning)

Description	Page	Category
DNMG ○○○○○○XS	B21, B41	Insert (Turning)
DNMG ○○○○○○ZS	B23	Insert (Turning)
DNMM ○○○○○○M	C17	Insert (Turning)
DNMM ○○○○○○M-NE	C17	Insert (Turning)
DNMM ○○○○○○M-SE	C17	Insert (Turning)
DNMM ○○○○○○PX	B21	Insert (Turning)
DNMP ○○○○○○TK	B19, B41	Insert (Turning)
DNMU ○○○○○○E-GK	B39	Insert (Turning)
DPET ○○○○○○(○)F%L-USF	B56	Insert (Turning)
DPET ○○○○○○(○)M%L-FSF	B56	Insert (Turning)
DPET ○○○○○○(○)MF%L-USF	B56	Insert (Turning)
DPET ○○○○○○(○)%L-FSF	B56	Insert (Turning)
DR ○○-○○	M96	Spare Parts (Drive-Ring)
DR ○○-○○□	M96	Spare Parts (Drive-Ring)
DR ○○○○-○○○○	M97	Spare Parts (Drive-Ring)
DR ○○○○-○○○○□	M97	Spare Parts (Drive-Ring)
DR12CR-IN	K47	Cartridge (Drill)
DR12CR-OUT	K47	Cartridge (Drill)
DR20CR-IN	K47	Cartridge (Drill)
DR20CR-OUT	K47	Cartridge (Drill)
DS ○○○	K37	Insert (Drilling)
DS-44	D12	Spare Parts (Shim)
DSBN%L ○○○○□-○○	D12	Toolholder (Turning)
DT-7	G36, G37, G38, K38, K40, K42, K44, M136, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-8	K40, K42, K44, M69, M83, M86, M87, M91, M120, M130, M138, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-9	K11	Spare Parts (Trox Wrench / Screwdriver type)
DT-10	M34, M43, M69, M74, M86, M87, M91, M120, M123, M124, M130, M134, M136, M138, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-15	K11, K40, K42, K44, K46, M38, M62, M63, M83, M86, M87, M91, M120, M123, M124, M130, M138, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-20	K25, K27, K29, K30, K41, K42, K43, K44, K45, K46, K47, M43, M80, M120, M123, M124, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-25	K25, K27, K29, K30, K41, K43, K47, M124, P17	Spare Parts (Trox Wrench / Screwdriver type)
DT-32	D14	Spare Parts (Shim)
DTGN%L ○○○○□-○○	D14	Toolholder (Turning)
DTM-6	K24, K26, K28, K30, M52, M53, M86, M87, M91, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTM-7	K24, K26, K28, K30	Spare Parts (Trox Wrench / Screwdriver type)
DTM-8	K24, K26, K28, K30, M44, M45, M46, M56, M57, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTM-10	K24, K26, K28, K30	Spare Parts (Trox Wrench / Screwdriver type)
DTM-15	K25, K26, K28, K30, M44, M45, M46, M56, M57, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTP-9	M112, M113	Spare Parts (Trox Wrench / Screwdriver type)
DTP-15	M22, P17	Spare Parts (Trox Wrench / Screwdriver type)
DTP-20	M42, P17	Spare Parts (Trox Wrench / Screwdriver type)
DV-33	D16	Spare Parts (Shim)
DVLN%L ○○○○□-○○	D16	Toolholder (Turning)
DVPN%L ○○○○□-○○	D16	Toolholder (Turning)
DW-44	D20	Spare Parts (Shim)
DWLN%L ○○○○□-○○	D20	Toolholder (Turning)
DVVNN ○○○○□-○○	D16	Toolholder (Turning)

Description	Page	Category
<b>E</b>		
ENGN ○○○○○○	<b>B83</b>	Insert (Turning)
ENGN ○○○○○○S○○○○○	<b>B83</b>	Insert (Turning)
ENGN ○○○○○○T○○○○○	<b>B83</b>	Insert (Turning)
EO□□- SCLC%○○-○○	<b>F50</b>	Boring Bar
EO□□- SCLC%○○-○○A	<b>F25</b>	Boring Bar (Dynamic Bar)
EO□□- SCLC%○○-○○A-○/○	<b>F25</b>	Boring Bar
EO□□- SCLP%○○-○○	<b>F50</b>	Boring Bar
EO□□- SCLP%○○-○○A	<b>F27</b>	Boring Bar (Dynamic Bar)
EO□□- SCLP%○○-○○A-○/○	<b>F27</b>	Boring Bar (Dynamic Bar)
EO□□- SDQC%○○-○○A	<b>F30</b>	Boring Bar (Dynamic Bar)
EO□□- SDQC%○○-○○A-○/○	<b>F30</b>	Boring Bar (Dynamic Bar)
EO□□- SDUC%○○-○○A	<b>F29</b>	Boring Bar (Dynamic Bar)
EO□□- SDUC%○○-○○A-○/○	<b>F29</b>	Boring Bar (Dynamic Bar)
EO□□- SDZC%○○-○○A	<b>F31</b>	Boring Bar (Dynamic Bar)
EO□□- STLP%○○-○○A	<b>F33</b>	Boring Bar (Dynamic Bar)
EO□□- STLP%○○-○○A-○/○	<b>F33</b>	Boring Bar (Dynamic Bar)
EO□□- STUP%○○-○○	<b>F56</b>	Boring Bar
EO□□- SVPB%○○-○○A	<b>F37</b>	Boring Bar (Dynamic Bar)
EO□□- SVPC%○○-○○A	<b>F37</b>	Boring Bar (Dynamic Bar)
EO□□- SVUB%○○-○○A	<b>F39</b>	Boring Bar (Dynamic Bar)
EO□□- SVUC%○○-○○A	<b>F39</b>	Boring Bar (Dynamic Bar)
EO□□- SWUB%○○-○○A	<b>F41</b>	Boring Bar (Dynamic Bar)
EO□□- SWUB%○○-○○A-○/○	<b>F41</b>	Boring Bar (Dynamic Bar)
EO□□- SWUP%○○-○○A	<b>F41</b>	Boring Bar (Dynamic Bar)
EO□□- SWUP%○○-○○A-○/○	<b>F41</b>	Boring Bar (Dynamic Bar)
<b>F</b>		
FGG%○○○○-○○	<b>G19</b>	Insert (Grooving / Plunge&Turn)
FH-2	<b>P17</b>	Spare Parts (Hexagon Wrench / Flag type)
FH-2.5	<b>P17</b>	Spare Parts (Hexagon Wrench / Flag type)
FMM ○○-○○	<b>G67</b>	Insert (Grooving / Plunge&Turn)
FMM ○	<b>G67</b>	Insert (Grooving / Plunge&Turn)
FPMT ○○○○○○ER	<b>M20</b>	Insert (Milling)
FS- ○○	<b>K11</b>	Spare Parts (Drill filling screw for Chamfering Attachment)
FT-6	<b>P17</b>	Spare Parts (Trox Wrench / Flag type)
FT-7	<b>F34, P17</b>	Spare Parts (Trox Wrench / Flag type)
FT-8	<b>P17</b>	Spare Parts (Trox Wrench / Flag type)
FT-10	<b>P17</b>	Spare Parts (Trox Wrench / Flag type)
FT-15	<b>G15, P17</b>	Spare Parts (Trox Wrench / Flag type)
FTK ○	<b>G69</b>	Insert (Cut-Off)
FTS-15	<b>F44</b>	Spare Parts (Trox Wrench / Flag type)
<b>G</b>		
GA ○○	<b>G17</b>	Insert (Grooving)
GB ○○%○○○	<b>C24, G10</b>	Insert (Grooving)
GB ○○%○○○R	<b>G10</b>	Insert (Grooving)
GBA ○○%○○○	<b>C16, C24, G6, G7, G8</b>	Insert (Grooving)
GBA ○○%○○○MY	<b>G7</b>	Insert (Grooving)
GBA ○○%○○○R	<b>G8</b>	Insert (Grooving)
GBA ○○%○○○-○○○	<b>C16, C24, G6, G7, G8</b>	Insert (Grooving)
GBA ○○%○○○-○○○MY	<b>G7</b>	Insert (Grooving)
GBA ○○%○○○-○○○R	<b>G8</b>	Insert (Grooving)
GE%○○○○-○○○□	<b>G34, G35</b>	Insert (Grooving)
GER ○○○-○○○□□	<b>G34, G35</b>	Insert (Grooving)
GFV%○○○○□-○○○(○)□	<b>G60</b>	Toolholder (Grooving)
GFVS%○○○○□-HB	<b>G62</b>	Toolholder (Grooving)
GFVS%○○○○□-HC	<b>G62</b>	Toolholder (Grooving)
GFVS%○○○○□-○○AA	<b>G58</b>	Toolholder (Grooving)
GFVS%○○○○□-○○○(○)□	<b>G62, G63</b>	Toolholder (Grooving)
GFVT%○○○○□-HB	<b>G62</b>	Toolholder (Grooving)
GFVT%○○○○□-HC	<b>G62</b>	Toolholder (Grooving)
GFVT%○○○○□-○○AA	<b>G58</b>	Toolholder (Grooving)
GFVT%○○○○□-○○○(○)□	<b>G62, G63</b>	Toolholder (Grooving)
GH ○○○○-○○	<b>B90, G17, G45</b>	Insert (Grooving)
GHU ○○○○	<b>G17, G45</b>	Insert (Grooving)
GIA ○○	<b>G48</b>	Insert (Grooving)
GIVF%○○○○B-○○○□	<b>G70</b>	Toolholder (Grooving)
GIV%○○○○-○□E	<b>G41</b>	Toolholder (Grooving)
GIV%○○○○-○□W	<b>G41</b>	Toolholder (Grooving)
GIV%○○○○-○□	<b>G41</b>	Toolholder (Grooving)
GIV%○○○○-○□(□)	<b>G41</b>	Toolholder (Grooving)

Description	Page	Category
GMG ○○○○-○○	<b>G18, G47, G68</b>	Insert (Grooving / Plunge&Turn) / Previous Description
GMG ○○○○-○○R	<b>G18, G47, G68</b>	Insert (Grooving / Plunge&Turn) / Previous Description
GMG ○○○○-○○MG	<b>G18, G47, G68</b>	Insert (Grooving / Plunge&Turn) / Previous Description
GMG ○○○○-○○RU	<b>G18</b>	Insert (Grooving / Plunge&Turn) / Previous Description
GMG ○○○○-○○○R	<b>G18, G47, G68</b>	Insert (Grooving / Plunge&Turn)
GMG ○○○○-○○○MG	<b>G18, G47, G68</b>	Insert (Grooving / Plunge&Turn)
GMG ○○○○-○○○MS	<b>G18</b>	Insert (Grooving / Plunge&Turn)
GMG ○○○○-○○○RU	<b>G18</b>	Insert (Grooving / Plunge&Turn)
GMGA ○○○○-○○R	<b>G19, G47, G68</b>	Insert (Grooving / Plunge&Turn) / Previous Description
GMGA ○○○○-○○○R	<b>G19, G47, G68</b>	Insert (Grooving / Plunge&Turn)
GMM 3014-04	<b>G19</b>	Insert (Grooving / Plunge&Turn)
GMM 3014-15R	<b>G19</b>	Insert (Grooving / Plunge&Turn)
GMM 3014-15RU	<b>G19</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○%/-MT-15D	<b>G20, H10</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○%/-TK-8D	<b>G20, H10</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○-MT	<b>G20, H10</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○-NB	<b>G20, H10</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○-TK	<b>G20, H10</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○-○○	<b>G18, G47, G68</b>	Insert (Grooving / Plunge&Turn) / Previous Description
GMM ○○○○-○○R	<b>G18</b>	Insert (Grooving / Plunge&Turn) / Previous Description
GMM ○○○○-TMR	<b>H10</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○%/-TMR-6D	<b>H10</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○-○○V	<b>G46</b>	Insert (Grooving / Plunge&Turn) / Previous Description
GMM ○○○○-○○MS	<b>G18</b>	Insert (Grooving / Plunge&Turn) / Previous Description
GMM ○○○○-○○VR	<b>G46</b>	Insert (Grooving / Plunge&Turn) / Previous Description
GMM ○○○○-○○○R	<b>G18</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○-○○○V	<b>G46</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○-○○○MS	<b>G18</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○-○○○MW	<b>G18, G47, G68</b>	Insert (Grooving / Plunge&Turn)
GMM ○○○○-○○○VR	<b>G46</b>	Insert (Grooving / Plunge&Turn)
GMN ○ (.)	<b>C16, C24, G20, G21, H10</b>	Insert (Grooving / Plunge&Turn)
GMN ○-TK	<b>G20, H10</b>	Insert (Grooving / Plunge&Turn)
GM%○○-TK-8D	<b>G20, H10</b>	Insert (Grooving / Plunge&Turn)
GM%○○-○(○)D	<b>G20, H10</b>	Insert (Grooving / Plunge&Turn)
GMGW ○○○○-○○R	<b>C25, G26</b>	Insert (Grooving / Plunge&Turn)
GMGW ○○○○-○○R-HR	<b>C25, G26</b>	Insert (Grooving / Plunge&Turn)
GOMT ○○○○○○ER-D	<b>M18</b>	Insert (Milling)
GP-1	<b>K40, K42, K44, P18</b>	Spare Parts (Plug)
GP-2	<b>K40, K41, K42, K43, K44, K45, K46, P18</b>	Spare Parts (Plug)
GS 91-○	<b>B90, G26</b>	Insert (Grooving)
GS-40TR	<b>P2</b>	Spare Parts (Screw)
GS-50	<b>F60, G15, G24, G44, G46, J22, J23, P2</b>	Spare Parts (Screw)
GS-50S	<b>F60, P2</b>	Spare Parts (Screw)
GS-4090T%W	<b>P2</b>	Spare Parts (Screw)
GV%○○○○R	<b>G42</b>	Insert (Grooving)
GV%○○○○(□)	<b>C24, G42, M133</b>	Insert (Grooving)
GV%○○○○-○○○(□)	<b>C24, G42, M133</b>	Insert (Grooving)
GVF%○○○○	<b>C24, G65, G71, M140</b>	Insert (Grooving)
GVF%○○○○AA	<b>G59</b>	Insert (Grooving)
GVF%○○○○R	<b>G65, G71</b>	Insert (Grooving)
GVF%○○○○-○○○□	<b>C24, G65, G71, M140</b>	Insert (Grooving)
GVF%○○○○-○○○□R	<b>G65, G71</b>	Insert (Grooving)
GVF%○○○○-○○○AA	<b>G59</b>	Insert (Grooving)
<b>H</b>		
HA○○ PCLN%12-○○	<b>F42</b>	Boring Bar (AD Bar Interchangeable Head)
HA○○ PDUN%15-○○	<b>F43</b>	Boring Bar (AD Bar Interchangeable Head)
HA○○ PTFN%16-○○	<b>F43</b>	Boring Bar (AD Bar Interchangeable Head)
HA○○ SCLC%09-○○	<b>F44</b>	Boring Bar (AD Bar Interchangeable Head)
HA○○ SDUC%11-○○	<b>F44</b>	Boring Bar (AD Bar Interchangeable Head)
HF20x53H	<b>M46, P6</b>	Spare Parts (Bolt with Coolant Hole)
HF24x60H	<b>M46, P6</b>	Spare Parts (Bolt with Coolant Hole)
HH3X6	<b>F76, P2</b>	Spare Parts (Bolt)
HH3X12	<b>D32, D33, D34, D35, D36, F76, P2</b>	Spare Parts (Bolt)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
HH4X12	G63, K47, P2	Spare Parts (Bolt)
HH4X16	M31, M33, M39, M41, P2	Spare Parts (Bolt)
HH5X15	G48, P2	Spare Parts (Bolt)
HH5X16	D23, G23, G24, G25, H13, P2	Spare Parts (Bolt)
HH5X20	F45, G66, G67, P2	Spare Parts (Bolt)
HH5X25	G23, G24, G25, G66, G67, H13, H19, P2	Spare Parts (Bolt)
HH5x30	F45, P2	Spare Parts (Bolt)
HH6X12	K47, P2	Spare Parts (Bolt)
HH6X16	P2	Spare Parts (Bolt)
HH6X20	F45, G17, G47, P2	Spare Parts (Bolt)
HH6X25	G16, G23, G27, G45, G68, H13, P2	Spare Parts (Bolt)
HH6X30	F45, H19, P2	Spare Parts (Bolt)
HH8X25	M22, M57, P2	Spare Parts (Bolt)
HH8X35	M69, P2	Spare Parts (Bolt)
HH8X40	M69, P2	Spare Parts (Bolt)
HH8X50	M69, M130, P2	Spare Parts (Bolt)
HH8X55	M130, P2	Spare Parts (Bolt)
HH8X65	M69, M130, P2	Spare Parts (Bolt)
HH8X70	P2	Spare Parts (Bolt)
HH8X80	P2	Spare Parts (Bolt)
HH8X85	P2	Spare Parts (Bolt)
HH8X25H	M46, P6	Spare Parts (Bolt with Coolant Hole)
HH8X100	P2	Spare Parts (Bolt)
HH8X110	P2	Spare Parts (Bolt)
HH10X25	M124	Spare Parts (Bolt)
HH10X30	M57, M124, P2	Spare Parts (Bolt)
HH10X30H	M46, P6	Spare Parts (Bolt with Coolant Hole)
HH10X30M	M22, P2	Spare Parts (Bolt)
HH10X30S	M22, P2	Spare Parts (Bolt)
HH10X35	M101, P2	Spare Parts (Bolt)
HH10X40	M57, P2	Spare Parts (Bolt)
HH12X25	M124, P2	Spare Parts (Bolt)
HH12X30	P2	Spare Parts (Bolt)
HH12X35	M38, M101, M112, M113	Spare Parts (Bolt)
HH12X35H	M46, P6	Spare Parts (Bolt with Coolant Hole)
HH12X35M	M22, P2	Spare Parts (Bolt)
HH12X40	M57, M69, P2	Spare Parts (Bolt)
HH12X55	M130, P2	Spare Parts (Bolt)
HH12X65	M69, M130, P2	Spare Parts (Bolt)
HH12X80	P2	Spare Parts (Bolt)
HH12X85	P2	Spare Parts (Bolt)
HH12X100	P2	Spare Parts (Bolt)
HH12X110	P2	Spare Parts (Bolt)
HH12X120	P2	Spare Parts (Bolt)
HH12X130	P2	Spare Parts (Bolt)
HH12X140	P2	Spare Parts (Bolt)
HH12X150	P2	Spare Parts (Bolt)
HH16X35	M112, M113	Spare Parts (Bolt)
HH16X40	P3	Spare Parts (Bolt)
HH16X45	M57, P3	Spare Parts (Bolt)
HH16X65	M74, P3	Spare Parts (Bolt)
HH16X90	M74, P3	Spare Parts (Bolt)
HH16X52H	M46, P6	Spare Parts (Bolt with Coolant Hole)
HH16X110	P3	Spare Parts (Bolt)
HH16X130	P3	Spare Parts (Bolt)
HH20X40	M101, P3	Spare Parts (Bolt)
HH20X55	P3	Spare Parts (Bolt)
HH20X75	P3	Spare Parts (Bolt)
HH20X90	M74, P3	Spare Parts (Bolt)
HH20X110	M74, P3	Spare Parts (Bolt)
HH20X120	P3	Spare Parts (Bolt)
HH20X140	P3	Spare Parts (Bolt)

Description	Page	Category
HH20X150	P3	Spare Parts (Bolt)
HH20X170	P3	Spare Parts (Bolt)
HH24X40	M77, P3	Spare Parts (Bolt)
HH24X60	M77, P3	Spare Parts (Bolt)
HH24X75	M77, P3	Spare Parts (Bolt)
HH24X90	M74, M77, P3	Spare Parts (Bolt)
HH24X110	M74, M77, P3	Spare Parts (Bolt)
HH24X120	M77, P3	Spare Parts (Bolt)
HH24X140	M77, P3	Spare Parts (Bolt)
HH24X150	M77, P3	Spare Parts (Bolt)
HH24X170	M77, P3	Spare Parts (Bolt)
HPB <sup>90°</sup> ○○○○-○○○	F18	2 edges Tip-Bar (Boring)
HPB <sup>90°</sup> ○○○○-○○○NB	F18	2 edges Tip-Bar (Boring)
HPBT <sup>90°</sup> ○○○○-○○○	F18	2 edges Tip-Bar (Back Boring)
HPFG <sup>90°</sup> ○○○○-○○	G53	2 edges Tip-Bar (Internal Face Grooving)
HPG <sup>90°</sup> ○○○○-○○	G30	2 edges Tip-Bar (Internal Grooving)
HPTR ○○○○-○○-○○○	J24	2 edges Tip-Bar (Internal Threading)
HS3X4	F13, F14, F21, F75, P3	Spare Parts (Screw)
HS3X8	F13, F14, P3	Spare Parts (Screw)
HS3X12	F13, F14, P3	Spare Parts (Screw)
HS3X16	F13, P3	Spare Parts (Screw)
HS3X4P	F19, P3	Spare Parts (Screw)
HS4X4	F21, F75, G32, G57, J26, P3	Spare Parts (Screw)
HS4X4P	F19, G31, G53, J25, P3	Spare Parts (Screw)
HS5X5	F75, P3	Spare Parts (Screw)
HS6X4P	G38	Spare Parts (Screw)
HS6X6	F76, P3	Spare Parts (Screw)
HS6X14	F76, P3	Spare Parts (Screw)
HS6X22	F76, P3	Spare Parts (Screw)
HS8X10	N11, P3	Spare Parts (Screw)
HS8X12	N11, P3	Spare Parts (Screw)
HS10X10	F76, P3	Spare Parts (Screw)
HS10X16	N11, P3	Spare Parts (Screw)
HS12X12	N11, P3	Spare Parts (Screw)
HS12X16	N11, P3	Spare Parts (Screw)
HS12X18	N11, P3	Spare Parts (Screw)
HS12X20	N11, P3	Spare Parts (Screw)
HS12X25	N4, P3	Spare Parts (Screw)
HS12X30	N4, N5, P3	Spare Parts (Screw)
HS12X35	N5, P3	Spare Parts (Screw)
HS16X12	N11, P3	Spare Parts (Screw)
HS16X18	N11, P3	Spare Parts (Screw)
HS16X20	N11, P3	Spare Parts (Screw)
HSB4X8 <sup>90°</sup>	E8, E9, E10, E11, E14, E20, E23, E24, P3	Spare Parts (Screw)
<b>J</b>		
JCET ○○○○○○M <sup>90°</sup> -FSF	B57	Insert (Turning)
JCET ○○○○○○ <sup>90°</sup> -FSF	B57	Insert (Turning)
JCGT ○○○○○○M <sup>90°</sup> -F	B57	Insert (Turning)
JCGT ○○○○○○ <sup>90°</sup> -F	B57	Insert (Turning)
JOMT ○○○○○○ER-D	M18	Insert (Milling)
<b>K</b>		
KFMS <sup>90°</sup> ○○○○□○○(○)○○(○)-8	G68	Toolholder (Grooving/Plunge&Turn)
KFMS <sup>90°</sup> ○○○○□○○(○)○○(○)-○	G66, G67	Toolholder (Grooving/Plunge&Turn)
KFTB <sup>90°</sup> ○○○○(○)-OS	G69	Blade (Grooving)
KGA <sup>90°</sup> ○○○○□-○	G17	Toolholder (Grooving)
KGA <sup>90°</sup> ○○○○□-OS	G17	Toolholder (Grooving)
KGB <sup>90°</sup> ○○○○□22-○○	G11	Toolholder (Grooving)
KGB <sup>90°</sup> ○○○○□-○○	G11	Toolholder (Grooving)
KGBA <sup>90°</sup> ○○○○□22-○○	G9	Toolholder (Grooving)
KGBA <sup>90°</sup> ○○○○□22-○○T5	G9	Toolholder (Grooving)
KGBA <sup>90°</sup> ○○○○□-○○	G9	Toolholder (Grooving)
KGBAS <sup>90°</sup> ○○○○□22-○○	G9	Toolholder (Grooving)
KGBAS <sup>90°</sup> ○○○○□22-○○T5	G9	Toolholder (Grooving)
KGBAS <sup>90°</sup> ○○○○□-○○	G9	Toolholder (Grooving)



Description	Page	Category
KGBS%L ○○○○□22-○○	G11	Toolholder (Grooving)
KGBS%L ○○○○□-○○	G11	Toolholder (Grooving)
KGH%L ○○○○□-○(○)	G16	Toolholder (Grooving)
KGHS%L ○○○○□-○	G16	Toolholder (Grooving)
KGIAR ○○H	G48	Toolholder (Grooving/Toolholder Body)
KGIAR ○○○○B-○	G48	Toolholder (Grooving)
KGM%L ○○○○□-○	G23, H13	Toolholder (Grooving/Plunge&Turn)
KGM%L ○○○○□-○T○○	G23, H13	Toolholder (Grooving/Plunge&Turn)
KGM%L ○○○○□-○-○○○	G22, H12	Toolholder (Grooving/Plunge&Turn)
KGMM%L ○○○○□-○	G24	Toolholder (Grooving/Plunge&Turn)
KGMS%L ○○○○□-○	G24	Toolholder (Grooving/Plunge&Turn)
KGMU%L ○○○○□	G25	Toolholder (Grooving/Plunge&Turn)
KGMW%L ○○○○□-○	G27	Toolholder (Grooving/Plunge&Turn)
KIGBA%L ○○○○-○○	G43	Toolholder (Grooving)
KIGH%L ○○○○B-○	G45	Toolholder (Grooving)
KIGM%L ○○○○B-○	G47	Toolholder (Grooving/Plunge&Turn)
KIGM%L ○○○○B-○V	G46	Toolholder (Grooving/Plunge&Turn)
KIGMU%L ○○○○B-○	G47	Toolholder (Grooving/Plunge&Turn)
KITG%L ○○○○T-○○	G44, J23	Toolholder (Grooving/Threading)
KN91%L ○○-○	G26	Toolholder (Grooving)
KNMX ○○○○○○%L-1	B24	Insert (Turning)
KPS-42	E28, F60, P8	Spare Parts (Shim)
KPT-32	E29, F61, P8	Spare Parts (Shim)
KPT-42	M41, P8	Spare Parts (Shim)
KTG%L ○○○○□22-○○	G15	Toolholder (Grooving)
KTG%L ○○○○□-○○	G15	Toolholder (Grooving)
KTGF%L ○○○○□-○○	G12	Toolholder (Grooving)
KTGF%L ○○○○□-○○F	G12	Toolholder (Grooving)
KTKB ○○-OS	H18	Blade (Cut-Off)
KTKB ○○-OSS	H18	Blade (Cut-Off)
KTKB%L ○○-OS	H18	Blade (Cut-Off)
KTKF%L ○○○○□-○○	E6, H6, J18	Toolholder (Back Turning/Cut-Off/Threading)
KTKFS%L ○○○○□-○○□	H8	Toolholder (Cut-Off)
KTKH%L ○○○○□-OS	H17	Toolholder (Cut-Off)
KTKH%L ○○○○□-○T○○S	H17	Toolholder (Cut-Off)
KTKH%L ○○○○□-○-○○○B	H17	Toolholder (Cut-Off)
KTKH%L ○○○○□-○-○○○S	H17	Toolholder (Cut-Off)
KTKTB ○○-○○	H19	Block (Cut-Off)
KTKTBF ○○-○○	H19	Block (Cut-Off)
KTN%L ○○○○□-○○	J16	Toolholder (Threading)
KTNS%L ○○○○□-○○	J16	Toolholder (Threading)
KT%L ○○○○□-○○	J22	Toolholder (Threading)
KTTXR ○○○○□-○○F	J20	Toolholder (Threading)
KVN-32	D18, P8	Spare Parts (Shim)
<b>L</b>		
LC-32	P8	Spare Parts (Shim)
LC-42	N6, P8	Spare Parts (Shim)
LC-53	P8	Spare Parts (Shim)
LC-4K	F42	Spare Parts (Shim)
LC-32N	D8, F66, P8	Spare Parts (Shim)
LC-42N	D8, N6, P8	Spare Parts (Shim)
LC-53N	D8, P8	Spare Parts (Shim)
LC-42%L	P8	Spare Parts (Shim)
LC-42N%L	F66, P8	Spare Parts (Shim)
LD-32	P8	Spare Parts (Shim)
LD-42	D11, N6, N7, P8	Spare Parts (Shim)
LD-43	D11, P8	Spare Parts (Shim)
LD-4K	F43	Spare Parts (Shim)
LD-4K43	F43	Spare Parts (Shim)
LD-32N	D11, F67, P8	Spare Parts (Shim)
LD-42-20	D11, P8	Spare Parts (Shim)
LD-43-20	D11, P8	Spare Parts (Shim)
LGBA-16%L S	G9, G43, N10, P15	Spare Parts (Clamp Set)
LGBA-22%L S	G9, G43, N10, P15	Spare Parts (Clamp Set)
LL-03	P7	Spare Parts (Lock Pin)
LL-03N	D14, P7	Spare Parts (Lock Pin)
LL-03S	P7	Spare Parts (Lock Pin)
LL-03T	P7	Spare Parts (Lock Pin)
LL-03SN	F66, F68, F69, P7	Spare Parts (Lock Pin)
LL-03TN	D14, F68, P7	Spare Parts (Lock Pin)
LL-05C	D19, P7	Spare Parts (Lock Pin)
LL-1	N7, P7	Spare Parts (Lock Pin)

Description	Page	Category
LL-2	N6, N8, P7	Spare Parts (Lock Pin)
LL-3	N6, N7, P7	Spare Parts (Lock Pin)
LL-4	D11, P7	Spare Parts (Lock Pin)
LL-5	P7	Spare Parts (Lock Pin)
LL-1C	P7	Spare Parts (Lock Pin)
LL-1D	P7	Spare Parts (Lock Pin)
LL-1N	D8, D12, D13, D14, D19, D20, F66, F68, F69, N7, P7	Spare Parts (Lock Pin)
LL-2C	D37, P7	Spare Parts (Lock Pin)
LL-1K	F43	Spare Parts (Lock Pin)
LL-2K	F42	Spare Parts (Lock Pin)
LL-3K	F43	Spare Parts (Lock Pin)
LL-2N	D8, D12, D13, D14, D19, D20, F66, F70, N6, N8, P7	Spare Parts (Lock Pin)
LL-3N	D11, N6, N7, P7	Spare Parts (Lock Pin)
LL-5N	D8, P7	Spare Parts (Lock Pin)
LL-1CN	D19, D37, P7	Spare Parts (Lock Pin)
LL-1DN	D11, F67, P7	Spare Parts (Lock Pin)
LNEU ○○○○-○○	M102	Insert (Milling)
LNEU ○○○○-○○S	M102	Insert (Milling)
LNUN ○○○○○○	B89	Insert (Turning) / Previous Description
LNUN ○○○○○○P○○○○○	B89	Insert (Turning)
LOF07R	M25	Spare Parts (Cartridge)
LP-2S	D18, P7	Spare Parts (Lock Pin)
LP-6S	D18, P7	Spare Parts (Lock Pin)
LPA-11	E8, E9, E10, P7	Spare Parts (Anchor Pin)
LPA-13	E8, E9, E10, P7	Spare Parts (Anchor Pin)
LPA-17	E8, E9, E10, P7	Spare Parts (Anchor Pin)
LPF-11	E11, E14, E20, E23, E24, P7	Spare Parts (Anchor Pin)
LPF-13	E11, E14, E20, P7	Spare Parts (Anchor Pin)
LPF-17	E11, E14, E20, P7	Spare Parts (Anchor Pin)
LPF-1113	E23, E24, P7	Spare Parts (Anchor Pin)
LPF-1117	E23, E24, P7	Spare Parts (Anchor Pin)
LR-80	D19, P8	Spare Parts (Shim)
LR-81	D19, P8	Spare Parts (Shim)
LR-10C	D19, P8	Spare Parts (Shim)
LR-12C	D19, D37, P8	Spare Parts (Shim)
LR-16C	D37, P8	Spare Parts (Shim)
LS-03	P3	Spare Parts (Lock Screw)
LS-05	D19, P3	Spare Parts (Lock Screw)
LS-1	N7, P4	Spare Parts (Lock Screw)
LS-2	N6, N7, N8, P4	Spare Parts (Lock Screw)
LS-3	D11, P4	Spare Parts (Lock Screw)
LS-4	P4	Spare Parts (Lock Screw)
LS-11	D18, P4	Spare Parts (Lock Screw)
LS-15	D18, P4	Spare Parts (Lock Screw)
LS-32	D12, D13, P8	Spare Parts (Shim)
LS-42	D12, D13, P8	Spare Parts (Shim)
LS-03N	D14, P3	Spare Parts (Lock Screw)
LS-1N	D8, D11, D12, D13, D14, D19, D20, D37, F68, N7, P4	Spare Parts (Lock Screw)
LS-2N	D8, D11, D12, D13, D14, D19, D20, F66, F70, N6, N7, N8, P4	Spare Parts (Lock Screw)
LS-4N	D8, P4	Spare Parts (Lock Screw)
LS-1P	F43	Spare Parts (Lock Screw)
LS-2P	F42	Spare Parts (Lock Screw)
LS-3P	F43	Spare Parts (Lock Screw)
LS-03S	P3	Spare Parts (Lock Screw)
LS-1S	P4	Spare Parts (Lock Screw)
LS-1T	D37, P4	Spare Parts (Lock Screw)
LS-03SN	D14, F66, F68, F69, P3	Spare Parts (Lock Screw)
LS-1SN	F66, F67, F69, P4	Spare Parts (Lock Screw)
LSD-445R	M31, P12	Spare Parts (Cartridge)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
LSE-445R	P12	Spare Parts (Cartridge)
LSE-445SR	M28	Spare Parts (Cartridge)
LSO-445R	M33, P12	Spare Parts (Cartridge)
LSP-1	D8, D11, D12, D13, D14, D19, D20, D37, F66, F67, F68, F69, N7, P7	Spare Parts (Shim Pin)
LSP-2	D8, D11, D12, D13, D14, D19, D20, D37, F66, F70, F6, F7, N8, P7	Spare Parts (Shim Pin)
LSP-3	D8, P7	Spare Parts (Shim Pin)
LSP-2K	F43	Spare Parts (Shim Pin)
LSP-3K	F42, F43	Spare Parts (Shim Pin)
LSP-415R	M39, P12	Spare Parts (Cartridge)
LT-32	N7, P8	Spare Parts (Shim)
LT-42	P8	Spare Parts (Shim)
LT-3K	F43	Spare Parts (Shim)
LT-32N	D14, F68, N7, P8	Spare Parts (Shim)
LT-42N	D14, P8	Spare Parts (Shim)
LT-32N-20	D14, F68, P8	Spare Parts (Shim)
LT-42N-20	D14, P8	Spare Parts (Shim)
LTE-490R	M41, P12	Spare Parts (Cartridge)
LTE-490SR	M40	Spare Parts (Cartridge)
LTK-5	G69, H17, P18	Spare Parts (Wrench)
LTP-10	F43	Spare Parts (Trox Plus Wrench / L-shape type)
LTP-15	F42, F43	Spare Parts (Trox Plus Wrench / L-shape type)
LTW-8SS	E5, P17	Spare Parts (Trox Wrench / L-shape type)
LTW-10S	E6, F9, F12, F13, F17, G55, H6, H8, J18, P17	Spare Parts (Trox Wrench / L-shape type)
LTW-10SS	E4, P17	Spare Parts (Trox Wrench / L-shape type)
LTW-15S	G22, H12, P17	Spare Parts (Trox Wrench / L-shape type)
LTW-20	E12, F71, G22, G23, G24, G46, H12, H13, H17, M134, P17	Spare Parts (Trox Wrench / L-shape type)
LW-1.5	P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-2	P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-2.5	P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-3	G15, K47, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-4	P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-4.5	M42, P17	Spare Parts (Wrench/for Clamp Screw)
LW-5	G26, G27, K47, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-6	P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-8	N11, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-10	M69, M130, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-14	M74, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-17	M74, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-19	M74, P17	Spare Parts (Hexagon Wrench / L-shape type)
LW-32	P9	Spare Parts (Shim)
LW-42	N8, P9	Spare Parts (Shim)
LW-32N	D20, F69, P9	Spare Parts (Shim)
LW-42N	D20, N8, P9	Spare Parts (Shim)
LW-42N <sup>1/2</sup>	F70, P9	Spare Parts (Shim)
LW-42 <sup>3/4</sup>	P9	Spare Parts (Shim)
<b>M</b>		
M3X 8	D22, D23, D25, D26, D27, D28, D29, D30, D31, D33, D34, D35, F72, F73, P4	Spare Parts (Screw)
M3X12	D22, D25, D26, D27, D33, D34, D35, F72, P4	Spare Parts (Screw)
M4X10	D22, D25, D27, D30, D31, P4	Spare Parts (Screw)
MAP-1806	M38	Spare Parts (Cartridge)
MAP-2506	M62, M63, P11	Spare Parts (Shim)

Description	Page	Category
MCSE ○○○	M134	Endmill (Chamfering)
MCSE ○○○-W	M134	Endmill (Chamfering)
MCSE ○○○-OOD	M134	Endmill (Chamfering)
MEA ○○-SO○	M83	Endmill
MEA ○○-SO○-(○○○)W(-OT)	M83	Endmill
MEA ○○-SO○-ZO	M83	Endmill
MEA ○○-SO○-○○○	M83	Endmill
MEAL ○○-SO○	M84	Endmill (for Aluminum Machining)
MEB ○○-SO○	M83	Endmill
MEB ○○-SO○-(○○○)W(-OT)	M83	Endmill
MEC ○○-SO○-○○	M45	Endmill (MEC)
MEC ○○-SO○-○○T	M45	Endmill (MEC)
MEC ○○-SO○-○○○-○○	M45	Endmill (MEC)
MEC ○○-SO○-○○○-○○T	M45	Endmill (MEC)
MEC ○○-W○○-○○○○(-H)	M44	Endmill (MEC)
MEC ○○○R-○○-○□-M	M46	Face Mill (MEC)
MEC ○○○R-○○-○(○)□	M46	Face Mill (MEC)
MECH ○○○-SO○-○○-○-OT	M56	Endmill (MECH)
MECH ○○○R-○○-○-○-OT	M57	Shell Mill (MECH)
MECH ○○○R-○○-○-○-OT-M	M57	Shell Mill (MECH)
MECH ○○○R○○-○-○-OT-BO○	M57	Endmill (MECH)
MECH ○○○-W○○-○○-○-○-OT	M56	Endmill (MECH)
MECX ○○-SO○-○○-○-OT	M52	Endmill (MECX)
MECX ○○-SO○-○○○-○○-○-OT	M52	Endmill (MECX)
MECX ○○○R-○○-○○T-M	M53	Face Mill (MECX)
MEF ○○-SO○	M136	Endmill (Countersinking)
MEF ○○-SO○-○○(○)W	M136	Endmill (Countersinking)
METS ○○-SO○	M138	Endmill (T-Slotting)
METS ○○-SO○-H	M138	Endmill (T-Slotting)
MEY ○○-SO○	M86	Endmill (3-D Endmill)
MEY ○○-SO○-○○○	M87	Endmill (3-D Endmill)
MEY ○○-SO○-○○○H	M86	Endmill (3-D Endmill)
MEY ○○-SO○-○○(○)W-H	M86	Endmill (3-D Endmill)
MEZ ○○-SO○G	M91	Endmill (3-D Endmill)
MEZ ○○-SO○-○○○G(W)	M91	Endmill (3-D Endmill)
MEZ ○○-SO○-○○(○)GW-H	M91	Endmill (3-D Endmill)
MEZ ○○-SO○-○○○HG	M91	Endmill (3-D Endmill)
MGI ○○○○-1□(□)	M132	Endmill (Grooving for M/C)
MHD ○○S-S○○-C	M67	Endmill (Helical "Plus Mill")
MHD ○○(○)-F	M69, M74	Front Piece "Plus Mill"
MHD ○○(○)-BT50-A	M73	Endmill (Helical "Plus Mill")
MHD ○○(○)-BT50-SA	M72	Endmill (Helical "Plus Mill")
MHD ○○(○)-FMA-A	M73	Endmill (Helical "Plus Mill")
MHD ○○(○)-FMA-SA	M72	Endmill (Helical "Plus Mill")
MHD ○○-ORF	M129	Front Piece of "Plus Mill"
MHD ○○-SO○-A	M68	Endmill (Helical "Plus Mill")
MHD ○○-SO○-B	M68	Endmill (Helical "Plus Mill")
MHD ○○-SO○-C	M67	Endmill (Helical "Plus Mill")
MHD ○○-SO○-SA	M67	Endmill (Helical "Plus Mill")
MHD ○○-SO○-SB	M67	Endmill (Helical "Plus Mill")
MHD ○○-SO○-ORSA	M129	Endmill (Helical "Plus Mill")
MHD ○○-SO○-A-○○○	M68	Endmill (Helical "Plus Mill")
MOF ○○○○○R-○○-○-OT	M22	Face Mill
MOF ○○○○○R-○○-○-OT-M	M22	Face Mill
MOFX ○○○○○R-○○-○(○)T-SF	M25	Face Mill
MOFX ○○○○○□○○-○(○)T-MSF	M25	Face Mill
MP-1	M38, M56, M57, M62, M63, M69, M74, M86, M87, M101, M112, M113, M120, M130	Spare Parts (Anti-seize Compound)
MRF ○○-SO○	M120	Endmill (Ball-Nose)
MRF ○○-SO○-○○○	M120	Endmill (Ball-Nose)
MRFW ○○-SO○	M120	Endmill (Ball-Nose)
MRFW ○○-SO○-○○○	M120	Endmill (Ball-Nose)
MRP ○○○R-○○	M124	Face Mill ("Radius Mill")
MRP ○○○R-○○-OT	M124	Face Mill ("Radius Mill")
MRP ○○○R-○○E-OT	M124	Face Mill ("Radius Mill")
MRP ○○○-SO○-○○	M123	Endmill (Radius Mill)
MRP ○○○-SO○-○○-OT	M123	Endmill (Radius Mill)
MRP ○○○-SO○-○○-OT-○○○	M123	Endmill (Radius Mill)
MRP ○○○-SO○-○○-○○○	M123	Endmill (Radius Mill)
MRP ○○○-W○○-OT○○○-○○(○)	M123	Endmill (Radius Mill)
MSD 45○○	M31	Face Mill (with Shank)
MSD 45○○-32	M31	Face Mill (with Shank)
MSD 45○○(○○)R	M31	Face Mill

S

Index

Index

Description	Page	Category
MSD-42	M31, P9	Spare Parts (Shim)
MSE 15○○	M39	Face Mill (with Shank)
MSE 45○○	M27	Face Mill (with Shank)
MSE 15○○-32	M39	Face Mill (with Shank)
MSE 45○○-32	M27	Face Mill (with Shank)
MSE 45○○○R-OT	M26	Face Mill
MSE 45○○○R-OT-M	M26	Face Mill
MSE 45○○○R-OT-M-SF	M28	Face Mill
MSE 45○○○R-OT-SF	M28	Face Mill
MSE-4215	M39, P9	Spare Parts (Shim)
MSE-4245	M27, P9	Spare Parts (Shim)
MSE-4245S	M26, P9	Spare Parts (Shim)
MS-FRW1	M96, M97	Spare Parts (Wrench / for MSTA)
MSO 45○○○R	M32	Face Mill
MSO 45○○○R-09	M34	Face Mill
MSO 45○○○R-E	M32	Face Mill
MSO 90○○○R-○○	M43	Face Mill
MSO 90○○○R-○○-OT	M42	Face Mill
MSO 90○○○R-○○-OT-M	M42	Face Mill
MSO 45○○R-13E-OT	M32	Face Mill
MSO 45○○-S	M32	Face Mill (with Shank)
MSO 45○○-S32-09	M34	Face Mill (with Shank)
MSO 90○○-S32-○○	M43	Face Mill (with Shank)
MSO-5200	M42, P9	Spare Parts (Shim)
MSO-4T245	M32, M33, P9	Spare Parts (Shim)
MSP 15○○	M39	Face Mill (with Shank)
MSP 15○○(○)R	M39	Face Mill
MSP-42	M39, P9	Spare Parts (Shim)
MSR ○○○R-○	M62	Face Mill
MSR ○○○R-○M	M62	Face Mill
MSR ○○○R-○-31.75	M62	Face Mill
MSR ○○○R-BT50-○	M63	Face Mill
MSRS ○○○○R-○(○)□	M37	Face Mill
MSRS ○○○○R-○(○)□-M	M37	Face Mill
MSTA ○○(○)□○○-○(○)T	M96	Slot Mill
MSTA ○○□○○○-○(○)T	M97	Slot Mill
MSTB ○○(○)□□○○○-OT	M100, M101	Slot Mill
MSTB ○○○□□○○○-OT	M100	Slot Mill
MSTC ○○○□□○○○-○○-○(○)T	M106, M107, M108, M109, M110, M111	Slot Mill
MSTC ○○○□□○○○-○○○-○○	M106, M108, M110	Slot Mill
MT-○	K11	Spare Parts (Clamp Screw)
MTE 90○○	M41	Face Mill (with Shank)
MTE 90○○(○)R	M41	Face Mill
MTE 90○○○R-OT-SF	M40	Face Mill
MTE 90○○○R-OT-M-SF	M40	Face Mill
MTE 90○○-32	M41	Face Mill (with Shank)
MTE-42	M41, P9	Spare Parts (Shim)
MTES ○○○	M81	Endmill
MTP 90○○	M41	Face Mill (with Shank)
MTPS ○○○	M85	Endmill
MVG ○○○○	M140	Endmill (Ring Grooving for M / C)
MVLN% ○○○○□-○○	D17	Toolholder (Turning)
MVN-32	D17, P9	Spare Parts (Shim)
MVVNN ○○○○□-○○	D17	Toolholder (Turning)
<b>N</b>		
NDCT ○○○○○○FR	M18	Insert (Milling)
NDCT ○○○○○○TR	M18	Insert (Milling)
NDCT ○○○○○○TRX	M18	Insert (Milling)
NDCW ○○○○○○FRX	C27, M18, M21	Insert (Milling)
NDCW ○○○○○○FRX-NE	C27, M21	Insert (Milling)
NDCW ○○○○○○TR	M18	Insert (Milling)
NDCW ○○○○○○TRX	M18	Insert (Milling)
NDKT ○○○○○○ER-N○	M18	Insert (Milling)
NDKT ○○○○○○ER-V	M19	Insert (Milling)
NDKT ○○○○○○TR	M18	Insert (Milling)
NDKW ○○○○○○ER	M19	Insert (Milling)
NDMM ○○○○○○ER-T	M19	Insert (Milling)
NDMM ○○○○○○ER-SP	M19	Insert (Milling)
NDMM ○○○○○○ER-N○	M19	Insert (Milling)
NDMT ○○○○○○ER-D	M19	Insert (Milling)
NDMT ○○○○○○ER-DH	M19	Insert (Milling)
NEMT ○○○○○○ER-D	M19	Insert (Milling)
NEMT ○○○○○○ER-DH	M19	Insert (Milling)

Description	Page	Category
<b>O</b>		
OFMR ○○○○○○EN-SH	M13	Insert (Milling)
OFMR ○○○○○○EN-GT	M13	Insert (Milling)
OFMT ○○○○○○EN-GT	M13	Insert (Milling)
OFMT ○○○○○○□□-SH	M13	Insert (Milling)
<b>P</b>		
P-03	D14, P7	Spare Parts (Shim Pin)
P-03S	D14, F66, F68, F69, P7	Spare Parts (Shim Pin)
PC-1	D8, D11, D12, D13, D14, D19, D20, D37, F66, F67, F68, F69, N7, P19	Spare Parts (Punch)
PC-2	D8, D11, D12, D13, D14, D19, D20, D37, F66, F70, N6, N7, N8, P19	Spare Parts (Punch)
PC-2K	F42, F43	Spare Parts (Punch)
PCLN% ○○○○B-○○	F66	Boring Bar / Previous Description
PCLN% ○○○○B-○○H	F66	Boring Bar / Previous Description
PCLN% ○○○○□-○○	D8	Toolholder (Turning)
PDHN% ○○○○□-○○	D11	Toolholder (Turning)
PDJN% ○○○○□-○○	D11	Toolholder (Turning)
PDJN% ○○○○□-○○U	D11	Toolholder (Turning)
PDUN% ○○○○B-○○	F67	Boring Bar / Previous Description
PDUN% ○○○○B-○○H	F67	Boring Bar / Previous Description
PH- ○○○○	F21, F75, G32, G57, J26	Sleeve (for Tip-Bar / Previous description)
PH ○○○○-○○	F21, F75, G32, G57, J26	Sleeve (for Tip-Bar)
PRGC% ○○○○□-○○	D19	Toolholder (Turning)
PRGC% ○○○○□-○○BE	D37	Toolholder (Turning)
PRGC% ○○○○□-○○BF	D37	Toolholder (Turning)
PRGN% ○○○○□-○○	D19	Toolholder (Turning)
PRXC% ○○○○□-○○	D19	Toolholder (Turning)
PSB% ○○○○-○○NBS	C16, C26, F20	Tip-Bar (Boring)
PSB% ○○○○-○○S	F20	Tip-Bar (Boring)
PSBN% ○○○○□-○○	D12	Toolholder (Turning)
PSBT% ○○○○-○○S	F20	Tip-Bar (Boring)
PSDNN ○○○○□-○○	D13	Toolholder (Turning)
PSFG% ○○○○-○○S	G57	Tip-Bar (Grooving)
PSG% ○○○○-○○S	G32	Tip-Bar (Grooving)
PSH ○○○○-○○○	F19, G31, G53, J25	Sleeve (for 2 edges Tip-Bar)
PSKN% ○○○○□-○○	D12	Toolholder (Turning)
PSSN% ○○○○□-○○	D13	Toolholder (Turning)
PSTR ○○○○-○○S	J26	Tip-Bar (Threading)
PTFN% ○○○○□-○○	D14	Toolholder (Turning)
PTGN% ○○○○□-○○	D14	Toolholder (Turning)
PTUN% ○○○○B-○○	F68	Boring Bar / Previous Description
PTUN% ○○○○B-○○H	F68	Boring Bar / Previous Description
PVLN% ○○○○□-○○Q	D18	Toolholder (Turning)
PVPN% ○○○○□-○○Q	D18	Toolholder (Turning)
PVVNN ○○○○□-○○Q	D18	Toolholder (Turning)
PWLN% ○○○○B-○○	F69	Boring Bar / Previous Description
PWLN% ○○○○B-○○H	F69	Boring Bar / Previous Description
PWLN% ○○○○□-○○	D20	Toolholder (Turning)
<b>R</b>		
RBG ○○W	B89	Insert (Turning) / Previous Description
RBG ○○K○○○○○	B89	Insert (Turning)
RCGX ○○○○M0-AQ	B57	Insert (Turning)
RCGX ○○○○○○P○○○○○	B89	Insert (Turning)
RCGX ○○○○○○S○○○○○	B89	Insert (Turning)
RCGX ○○○○○○T○○○○○	B89	Insert (Turning)
RCMA ○○○○○○	B89	Insert (Turning) / Previous Description
RCMA ○○○○○○P○○○○○	B89	Insert (Turning)
RCMA ○○○○○○P○○○-○○	B89	Insert (Turning) / Previous Description
RCMA ○○○○○○T○○○○○	B89	Insert (Turning)
RCMT ○○○○M0-BB	B73, D37	Insert (Turning)
RCMX ○○○○M0	B57, B75	Insert (Turning)
RDFG ○○FR	M20	Insert (Milling)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
RDHX ○○○○M0T	M20	Insert (Milling)
RDMT ○○○○M0-H	M20	Insert (Milling)
RNGN ○○○○○○	B83	Insert (Turning)
RNGN ○○○○○○K○○○○○	B83	Insert (Turning)
RNGN ○○○○○○P○○○○○	B83	Insert (Turning)
RNGN ○○○○○○S○○○○○	B83	Insert (Turning)
RNGN ○○○○○○T○○○○○	B83	Insert (Turning)
RNMG ○○○○○○	B24	Insert (Turning)
RNMN ○○○○○○	C9	Insert (Turning) / Previous Description
RNMN ○○○○○○S○○○○○	C9	Insert (Turning)
RPMT ○○○○○○	M20	Insert (Milling)
RPMT ○○○○M0	M20	Insert (Milling)
RPMT ○○○○M0-H	M20	Insert (Milling)
RPMT ○○○○M0-BB	B73	Insert (Turning)

## S

S○○□- CCLN%○○-○○A	F74	Boring Bar
S○○□- CCLN%○○-○○GX	F73	Boring Bar
S○○□- CDUN%○○-○○GX	F73	Boring Bar
S○○□- CELN%○○-○○	F72	Boring Bar
S○○□- CSKN%○○-○○	F72	Boring Bar
S○○□- CSKN%○○-○○A	F74	Boring Bar
S○○□- CSKN%○○-○○GX	F73	Boring Bar
S○○□- CSKP%○○-○○	F60	Boring Bar
S○○□- CTUC%○○-○○	F72	Boring Bar
S○○□- CTUN%○○-○○A	F74	Boring Bar
S○○□- CTUP%○○-○○	F61	Boring Bar
S○○□- KTGF16	G13	Sleeve Holder (Grooving)
S○○□- KTTXL16	J20	Sleeve Holder (Threading)
S○○□- PCLN%○○-○○	F66	Boring Bar
S○○□- PDUN%○○-○○	F67	Boring Bar
S○○□- PTUN%○○-○○	F68	Boring Bar
S○○□- PWLN%○○-○○	F69, F70	Boring Bar
S○○□- SCLC○○	E13	Sleeve Holder (Turning)
S○○□- SCLC%○○-○○	F49	Boring Bar
S○○□- SCLC%○○-○○A	F25	Boring Bar (Dynamic Bar)
S○○□- SCLC%○○-○○E	F49	Boring Bar
S○○□- SCLC%○○-○○AE	F25	Boring Bar (Dynamic Bar)
S○○□- SCLP%○○-○○	F49	Boring Bar
S○○□- SCLP%○○-○○A	F27	Boring Bar (Dynamic Bar)
S○○□- SCLP%○○-○○E	F49	Boring Bar
S○○□- SDLC%○○	E19	Sleeve Holder (Turning)
S○○□- SDQC%○○-○○A	F30	Boring Bar (Dynamic Bar)
S○○□- SDUC%○○	E19	Sleeve Holder (Turning)
S○○□- SDUC%○○-○○	F51	Boring Bar
S○○□- SDUC%○○-○○A	F29	Boring Bar (Dynamic Bar)
S○○□- SDUC%○○-○○E	F51	Boring Bar
S○○□- SDZC%○○-○○	F52	Boring Bar
S○○□- SDZC%○○-○○A	F31	Boring Bar (Dynamic Bar)
S○○□- SDZC%○○-○○E	F52	Boring Bar
S○○□- SSKP%○○-○○	F60	Boring Bar
S○○□- STLB%○○-○○A	F33	Boring Bar (Dynamic Bar)
S○○□- STLB%○○-○○AE	F33	Boring Bar (Dynamic Bar)
S○○□- STLC%○○-○○A	F34	Boring Bar (Dynamic Bar)
S○○□- STLP%○○-○○A	F33	Boring Bar (Dynamic Bar)
S○○□- STUB%○○-○○	F54	Boring Bar
S○○□- STUB%○○-○○E	F54	Boring Bar
S○○□- STUP%○○-○○	F54	Boring Bar
S○○□- STUP%○○-○○E	F54	Boring Bar
S○○□- STW%15	F9, G55	Toolholder (for Twin Bar)
S○○□- STWP%○○-○○	F57, J28	Toolholder (Boring / Threading)
S○○□- STWP%○○-○○E	F57, J28	Toolholder (Boring / Threading)
S○○□- SVJB%○○-○○A	F37	Boring Bar (Dynamic Bar)
S○○□- SVJB%○○-○○E	F62	Boring Bar
S○○□- SVJB%○○-○○EN	F62	Boring Bar
S○○□- SVJC%○○-○○A	F37	Boring Bar (Dynamic Bar)
S○○□- SVJC%○○-○○E	F62	Boring Bar
S○○□- SVJP%○○-○○A	F37	Boring Bar (Dynamic Bar)
S○○□- SVJP%○○-○○E	F62	Boring Bar
S○○□- SVNR12	F14	Toolholder (for System Tip-Bar)
S○○□- SVNR12N	F14	Toolholder (for System Tip-Bar)
S○○□- SVNR12S	F14	Toolholder (for System Tip-Bar)
S○○□- SVNR12SN	F14	Toolholder (for System Tip-Bar)
S○○□- SVNR12XN	F17	Toolholder (for System Tip-Bar)

Description	Page	Category
S○○□- SVNR12SXN	F17	Toolholder (for System Tip-Bar)
S○○□- SVPB%○○-○○A	F37	Boring Bar (Dynamic Bar)
S○○□- SVPB%○○-○○E	F62	Boring Bar
S○○□- SVPB%○○-○○EN	F62	Boring Bar
S○○□- SVPC%○○-○○A	F37	Boring Bar (Dynamic Bar)
S○○□- SVUB%○○	E27	Sleeve Holder (Turning)
S○○□- SVUC%○○	E27	Sleeve Holder (Turning)
S○○□- SVPC%○○-○○E	F62	Boring Bar
S○○□- SVUB%○○-○○A	F39	Boring Bar (Dynamic Bar)
S○○□- SVUC%○○-○○A	F39	Boring Bar (Dynamic Bar)
S○○□- SVUB%○○-○○E	F63	Boring Bar
S○○□- SVUB%○○-○○EN	F63	Boring Bar
S○○□- SVUC%○○-○○E	F63	Boring Bar
S○○□- SVZB%○○-○○A	F39	Boring Bar (Dynamic Bar)
S○○□- SVZB%○○-○○E	F63	Boring Bar
S○○□- SVZB%○○-○○EN	F63	Boring Bar
S○○□- SVZC%○○-○○A	F39	Boring Bar (Dynamic Bar)
S○○□- SVZC%○○-○○E	F63	Boring Bar
S○○□- SWUB%○○-○○	F65	Boring Bar
S○○□- SWUB%○○-○○A	F41	Boring Bar (Dynamic Bar)
S○○□- SWUB%○○-○○AE	F41	Boring Bar (Dynamic Bar)
S○○□- SWUB%○○-○○E	F65	Boring Bar
S○○□- SWUB%○○-○○EN	F65	Boring Bar
S○○□- SWUP%○○-○○A	F41	Boring Bar (Dynamic Bar)
S○○□- SWUP%○○-○○E	F65	Boring Bar
S○○□- SYXP%○○-○○E	F59	Boring Bar
S○○□- WWLN%○○-○○E	F70	Boring Bar
S○○- CH○○	K10	Toolholder ("Magic Drill" / Chamfering Attachment)
SF○○- DRC○○○○M-○	K12, K13, K14	Toolholder ("Magic Drill")
SS○○- DRC○○○○M-○	K7, K8, K9	Toolholder ("Magic Drill")
S○○- DR○○○○○○	K38	Toolholder ("Magic Drill")
S○○- DR○○○○M-○-○○	K24, K25, K26, K27, K28, K29, K30	Toolholder ("Magic Drill")
S○○- DR○○○○○○-12CR	K47	Toolholder ("Magic Drill")
S○○- DR○○○○○○-20CR	K47	Toolholder ("Magic Drill")
S○○- DR○○○○(○○)-○○	K40, K41, K42, K43, K44, K45, K46	Toolholder ("Magic Drill")
SABSR ○○○○□-○○F	E8	Toolholder (Turning)
SABWR ○○○○□-○○F	E9, E10	Toolholder (Turning)
SB-1STR	F54, F55, F58, P4	Spare Parts (Screw)
SB-3STR	F49, F50, F57, J28, P4	Spare Parts (Screw)
SB-1TR	F54, F55, F56, F58, P4	Spare Parts (Screw)
SB-2TR	F54, F55, F56, F58, J17, P4	Spare Parts (Screw)
SB-3TR	F54, F55, F56, F57, J28, P4	Spare Parts (Screw)
SB-3.5TR	J16, J17, P4	Spare Parts (Screw)
SB-4TR	F49, F50, F54, F55, F56, F57, F60, F71, G15, G44, J22, J23, P4	Spare Parts (Screw)
SB-5TR	G23, G24, G46, H13, P4	Spare Parts (Screw)
SB-1635TR	F25, F49, F53, P4	Spare Parts (Screw)
SB-2035TR	F25, F33, F41, P4	Spare Parts (Screw)
SB-2040TR	F49, F59, F65, J17, P4	Spare Parts (Screw)
SB-2045TR	F59, K24, K26, K28, K40, K42, K44, P4	Spare Parts (Screw)
SB-2050TR	E22, E25, E26, E27, F37, F39, F41, F63, F65, J17, P4	Spare Parts (Screw)
SB-2060TR	P4	Spare Parts (Screw)
SB-2080TR	K38, P4	Spare Parts (Screw)
SB-2250TR	F34, K24, K26, K28, K30, M136, P4	Spare Parts (Screw)
SB-2255TR	G36, G37, G38, P4	Spare Parts (Screw)
SB-2260TR	K40, K42, K44, M136, P4	Spare Parts (Screw)

S



Index

Description	Page	Category
SB-2290TR	<b>K38, P4</b>	Spare Parts (Screw)
SB-2545TR	F25, F31, F33, F41, F49, F50, F65, M44, M45, M78, P4	Spare Parts (Screw)
SB-2560TR	E13, E19, F29, F30, F31, F34, F51, F52, F65, M69, M83, M130, M138, P4	Spare Parts (Screw)
SB-2570TR	E5, E12, E13, E15, E16, E17, E21, E22, E23, E24, E25, E26, E27, F37, F39, F63, G36, G37, G38, K24, K26, K28, K30, K40, K42, K44, P4	Spare Parts (Screw)
SB-25100TR	<b>K38, P4</b>	Spare Parts (Screw)
SB-3060TR	F27, F33, M34, M78, M123, M134, M138, P4	Spare Parts (Screw)
SB-3080TR	D14, E4, E8, E9, E10, E22, F9, F12, F13, F14, F17, F44, G36, G55, K24, K26, K28, K30, M43, M69, M74, M123, M124, M130, M136, P4	Spare Parts (Screw)
SB-4060TR	<b>M78, M79, P5</b>	Spare Parts (Screw)
SB-4065TR	E13, F25, F27, F29, F30, F31, F33, F41, F65, M78, M79, M132, P4	Spare Parts (Screw)
SB-4085TR	D8, D10, D12, D16, D20, E12, E15, E16, E17, E19, E21, F51, F52, G36, J17, K25, K26, K28, K30, K40, K42, K44, K46, M83, M123, M124, M130, M132, M138, P5	Spare Parts (Screw)
SB-5070TR	<b>M134, P5</b>	Spare Parts (Screw)
SB-5085TR	K25, K27, K29, K30, K41, K42, K43, K44, K45, K46, K47, M43, M80, P5	Spare Parts (Screw)
SB-5090TR	E12, F71, K25, K27, K29, K30, M134, P5	Spare Parts (Screw)
SB-40115TR	M123, M124, P5	Spare Parts (Screw)
SB-40140TR	G48, M38, M62, M63, P5	Spare Parts (Screw)
SB-45130TR	<b>M42, P5</b>	Spare Parts (Screw)
SB-50120TR	M123, M124, P5	Spare Parts (Screw)
SB-60120TR	K25, K27, K29, K30, K41, K43, K47, M38, M62, M63, M124, P5	Spare Parts (Screw)
SB-4082TPR	<b>M22, P5</b>	Spare Parts (Screw)
SB-2035TRG	<b>M52, P4</b>	Spare Parts (Screw)
SB-2040TRG	M86, M87, M91, P4	Spare Parts (Screw)
SB-2042TRG	K24, K26, K28, K30, M52, M53, P4	Spare Parts (Screw)
SB-2555TRG	M44, M45, M46, M56, M57, M86, M87, M91, P4	Spare Parts (Screw)
SB-3060TRG	<b>P4</b>	Spare Parts (Screw)
SB-3070TRG	M86, M87, M91, P4	Spare Parts (Screw)
SB-4070TRG	M86, M87, M91, P5	Spare Parts (Screw)
SB-2045TRN	<b>G36, G37, P4</b>	Spare Parts (Screw)
SB-4050TRN	<b>H8, P5</b>	Spare Parts (Screw)
SB-4070TRN	M44, M45, M46, M56, M57, P5	Spare Parts (Screw)
SB-40125TRN	E23, E24, F37, F39, F63, N9, P5	Spare Parts (Screw)
SB-3590TRP	<b>M112, M113</b>	Spare Parts (Screw)
SB-4070TRS	G12, G13, J22, P5	Spare Parts (Screw)
SB-50120TRS	<b>M22, P5</b>	Spare Parts (Screw)

Description	Page	Category
SB-4070TRW	<b>G12, J20, P5</b>	Spare Parts (Screw)
SB-4590TRWN	<b>E6, H6, J18, P5</b>	Spare Parts (Screw)
SC-30067	<b>M120, P5</b>	Spare Parts (Screw)
SC-35085	<b>M120, P5</b>	Spare Parts (Screw)
SC-40100	<b>M120, P5</b>	Spare Parts (Screw)
SC-50130	<b>M120, P5</b>	Spare Parts (Screw)
SC-60160	<b>M120, P5</b>	Spare Parts (Screw)
SC-60210	<b>M120, P5</b>	Spare Parts (Screw)
SCAC <sup>9/L</sup> ○○○○□-○○	<b>E12</b>	Toolholder (Turning)
SCAC <sup>9/L</sup> ○○○○□-○○FF	<b>E12</b>	Toolholder (Turning)
SCGT ○○○○○○ <sup>9/L</sup> -A3	<b>B58</b>	Insert (Turning)
SCLC <sup>9/L</sup> ○○○○□-○○	<b>E12</b>	Toolholder (Turning)
SCLC <sup>9/L</sup> ○○○○B-○○	<b>F49</b>	Boring Bar / Previous Description
SCLC <sup>9/L</sup> ○○○○B-○○E	<b>F49</b>	Boring Bar / Previous Description
SCLC <sup>9/L</sup> ○○○○B-○○W	<b>F49</b>	Boring Bar / Previous Description
SCLC <sup>9/L</sup> ○○○○B-○○EH	<b>F50</b>	Boring Bar / Previous Description
SCLC <sup>9/L</sup> ○○○○B-○○WH	<b>F50</b>	Boring Bar / Previous Description
SCLNR ○○○○□-○○FF	<b>E4</b>	Toolholder (for Small Double-Sided Tools)
SCLP <sup>9/L</sup> ○○○○B-○○	<b>F49</b>	Boring Bar / Previous Description
SCLP <sup>9/L</sup> ○○○○B-○○E	<b>F49</b>	Boring Bar / Previous Description
SCLP <sup>9/L</sup> ○○○○B-○○W	<b>F49</b>	Boring Bar / Previous Description
SCLP <sup>9/L</sup> ○○○○B-○○EH	<b>F50</b>	Boring Bar / Previous Description
SCLP <sup>9/L</sup> ○○○○B-○○WH	<b>F50</b>	Boring Bar / Previous Description
SCLP <sup>9/L</sup> ○○○○B-○○W-○/○	<b>F49</b>	Boring Bar / Previous Description
SCMT ○○○○○○HQ	<b>B58</b>	Insert (Turning)
SDCN ○○○○AUTN	<b>M10</b>	Insert (Milling)
SDCT ○○○○□□-□□	<b>M115</b>	Insert (Milling)
SDCT ○○○○□□%-□□	<b>M115</b>	Insert (Milling)
SDET ○○○○□□-□□	<b>M115</b>	Insert (Milling)
SDET ○○○○□□%-□□	<b>M115</b>	Insert (Milling)
SDJC <sup>9/L</sup> ○○○○□-○○	<b>E15</b>	Toolholder (Turning)
SDJC <sup>9/L</sup> ○○○○□-○○F	<b>E15</b>	Toolholder (Turning)
SDLNR ○○○○□-○○FF	<b>E4</b>	Toolholder (for Small Double-Sided Tools)
SDKN ○○○○AUFN	<b>C27, M10, M21</b>	Insert (Milling)
SDKN ○○○○AUTN	<b>M10</b>	Insert (Milling)
SDKN ○○○○AUFN-NE	<b>C27, M21</b>	Insert (Milling)
SDKR ○○○○AUEN-S	<b>M10</b>	Insert (Milling)
SDKW ○○○○○○FN	<b>M13</b>	Insert (Milling)
SDKW ○○○○○○TN	<b>M13</b>	Insert (Milling)
SDKW ○○○○○○AESN	<b>M13</b>	Insert (Milling)
SDKW ○○○○○○AETN	<b>M13</b>	Insert (Milling)
SDL <sup>9/L</sup> ○○○○□-○○FF	<b>E16</b>	Toolholder (Turning)
SDLP <sup>9/L</sup> ○○○○□-○○F(F)	<b>E16</b>	Toolholder (Turning)
SDMR ○○○○AUER-H	<b>M10</b>	Insert (Milling)
SDMT ○○○○AESR-H	<b>M13</b>	Insert (Milling)
SDMT ○○○○E-K	<b>M13</b>	Insert (Milling)
SDMT ○○○○○○C	<b>M13</b>	Insert (Milling)
SDNCN ○○○○□-○○	<b>E21</b>	Toolholder (Turning)
SDNC <sup>9/L</sup> ○○○○□-○○F	<b>E21</b>	Toolholder (Turning)
SDUC <sup>9/L</sup> ○○○○B-○○	<b>F51</b>	Boring Bar / Previous Description
SDUC <sup>9/L</sup> ○○○○B-○○E	<b>F51</b>	Boring Bar / Previous Description
SDUC <sup>9/L</sup> ○○○○B-○○W	<b>F51</b>	Boring Bar / Previous Description
SDXC <sup>9/L</sup> ○○○○□-○○	<b>E17</b>	Toolholder (Turning)
SDZC <sup>9/L</sup> ○○○○B-○○	<b>F52</b>	Boring Bar / Previous Description
SDZC <sup>9/L</sup> ○○○○B-○○E	<b>F52</b>	Boring Bar / Previous Description
SE-3070TRP	<b>M112, M113</b>	Spare Parts (Screw)
SE-40050TR	<b>M101, M102</b>	Spare Parts (Screw)
SE-40055TR	<b>M101, M102</b>	Spare Parts (Screw)
SE-40068TR	<b>M101, M102</b>	Spare Parts (Screw)
SE-40080TR	<b>M102</b>	Spare Parts (Screw)
SE-40090TR	<b>M101, M102</b>	Spare Parts (Screw)
SE-40100TR	<b>M102</b>	Spare Parts (Screw)
SE-40120TR	<b>G22, H12, H17, P5</b>	Spare Parts (Screw)
SE-50125TR	<b>G22, H12, H17, P5</b>	Spare Parts (Screw)
SEEN ○○○○AFFN	<b>C27, M21</b>	Insert (Milling)
SEEN ○○○○AFTN	<b>M10</b>	Insert (Milling)
SEEN ○○○○AFFN-NE	<b>C27, M21</b>	Insert (Milling)
SEEN ○○○○AFFR-W	<b>C27, M10, M21</b>	Insert (Milling)
SEEN ○○○○AFFR-W	<b>M10</b>	Insert (Milling)
SEGN ○○○○○○	<b>C23</b>	Insert (Milling)
SEGN ○○○○○○NE	<b>C23</b>	Insert (Milling)
SEKN ○○○○AFFN	<b>M10</b>	Insert (Milling)
SEKN ○○○○AFTN	<b>M10</b>	Insert (Milling)
SEKN ○○○○EFTR	<b>M10</b>	Insert (Milling)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
SEKR ○○○○AFEN-S	M10	Insert (Milling)
SEKT ○○○○AFEN-S	M13	Insert (Milling)
SEKW ○○○○○○FN	M13	Insert (Milling)
SEKW ○○○○○○TN	M13	Insert (Milling)
SEKW ○○○○AFTN	M13	Insert (Milling)
SEMM ○○○○○○PESR	M14	Insert (Milling)
SEMR ○○○○AFER-H	M10	Insert (Milling)
SEMT ○○○○○○OC	M13	Insert (Milling)
SF%/- ○○○(○)□	G62, G63, G64	Blade (Grooving)
SH- ○○○○	F75	Sleeve (for Boring Bar / Previous description)
SH ○○○○-○○○	F75	Sleeve (for Boring Bar)
SH- 50150TR	M25, P5	Spare Parts (Cartridge Clamp Screw)
SHA ○○○○-○○○	G38	Sleeve (for Automatic Lathe SIGE)
SHA ○○○○.○-○○○	G38	Sleeve (for Automatic Lathe SIGE)
SHC- ○○○○○○	F76	Coolant Sleeve (for Boring Bar / Previous description)
SHC ○○○○-○○	F76	Coolant Sleeve (for Boring Bar)
SHE ○○○○-○○	K33	Adjustable Sleeve (for Magic Drill)
SHEM ○○○○-○○	K39	Adjustable Sleeve (for Magic Drill)
SHL- ○	F76	Spare Parts (Back Cover)
SIGE%/- ○○○○□-EH	G36	Toolholder (Grooving)
SIGE%/- ○○○○□-WH	G37	Toolholder (Grooving)
SIGER ○○○○□-WH-90	G38	Toolholder (Grooving / for Automatic Lathe)
SIN%/- ○○○○S-○○	J17	Toolholder (Threading)
SIN%/- ○○○○S-○○E	J17	Toolholder (Threading)
SIT%/- ○○○○-○○	F57, J28	Toolholder (Boring / Threading)
SJLC%/- ○○○○B-○○W	F53	Boring Bar / Previous Description
SJS- ○	F76	Coolant Joint
SJZC%/- ○○○○B-○○W	F53	Boring Bar / Previous Description
SLT ○○-○○□□□	M98	Insert (Slot Mill MSTA)
SNCN ○○○○XNTN	M12	Insert (Milling)
SNGA ○○○○○○	B27, B84	Insert (Turning)
SNGA ○○○○○○OME	C7	Insert (Turning) / Previous Description
SNGA ○○○○○○ME-T	C7	Insert (Turning) / Previous Description
SNGA ○○○○○○S○○○○○	B84	Insert (Turning)
SNGA ○○○○○○T○○○○○	B84	Insert (Turning)
SNGA ○○○○○○S○○○○○OME	C7	Insert (Turning)
SNGA ○○○○○○S○○○○○OMET	C7	Insert (Turning)
SNGA ○○○○○○T○○○○○OME	C7	Insert (Turning)
SNGG ○○○○○○%/-25R	B27	Insert (Turning)
SNGG ○○○○○○%/-B/C	B27, B42	Insert (Turning)
SNGN ○○○○○○	B84, B85	Insert (Turning)
SNGN ○○○○○○K	B85	Insert (Turning) / Previous Description
SNGN ○○○○○○P○○○○○	B85	Insert (Turning)
SNGN ○○○○○○S○○○○○	B84, B85	Insert (Turning)
SNGN ○○○○○○T○○○○○	B84, B85	Insert (Turning / Milling)
SNGN ○○○○○○-T○○	B84	Insert (Turning)
SNGX ○○○○○○T○○○○○	B85	Insert (Turning)
SNKN ○○○○XNTN	M12	Insert (Milling)
SNMA ○○○○○○	B27, B42	Insert (Turning)
SNMA ○○○○○○S○○○○○	B84	Insert (Turning)
SNMA ○○○○○○-T○○	B84	Insert (Turning)
SNMF ○○○○○○-21	B73, D38	Insert (Turning)
SNMF ○○○○XNTN	M12	Insert (Milling)
SNMG ○○○○○○	B25, B42	Insert (Turning)
SNMG ○○○○○○C	B27	Insert (Turning)
SNMG ○○○○○○GC	B27	Insert (Turning)
SNMG ○○○○○○CHK	B25	Insert (Turning)
SNMG ○○○○○○HQ	B25, B42	Insert (Turning)
SNMG ○○○○○○HS	B25, B42	Insert (Turning)
SNMG ○○○○○○HT	B25, B42	Insert (Turning)
SNMG ○○○○○○MQ	B26	Insert (Turning)
SNMG ○○○○○○OMS	B26	Insert (Turning)
SNMG ○○○○○○PH	B25	Insert (Turning)
SNMG ○○○○○○PS	B25	Insert (Turning)
SNMG ○○○○○○PT	B25	Insert (Turning)
SNMG ○○○○○○%/-C	B27	Insert (Turning)
SNMG ○○○○○○%/-ST	B26	Insert (Turning)
SNMG ○○○○○○XP	B26, B42	Insert (Turning)
SNMG ○○○○○○XQ	B26, B42	Insert (Turning)
SNMG ○○○○○○XS	B26, B42	Insert (Turning)
SNMG ○○○○○○ZS	B27	Insert (Turning)
SNMM ○○○○○○PX	B26	Insert (Turning)
SNMN ○○○○○○	B27, B42, B85, C9, M11	Insert (Turning / Milling)

Description	Page	Category
SNMN ○○○○○○S○○○○○	C9	Insert (Turning)
SNMN ○○○○○○T○○○○○	B79	Insert (Turning)
SOKN 13T3AXFN	M11	Insert (Milling)
SOKN 13T3AXFN-NE	C27, M21	Insert (Milling)
SOKN 13T3AXTN	M11	Insert (Milling)
SOKR 13T3AXEN-J	M10	Insert (Milling)
SOMT 0903AXEN-J	M14	Insert (Milling)
SOMW 0903AXFN	M14	Insert (Milling)
SOMW 0903AXTN	M14	Insert (Milling)
SP-2D	D14	Spare Parts (Spring)
SP-3D	D8, D10, D12, D20	Spare Parts (Spring)
SP-5D	D16	Spare Parts (Spring)
SP3X4	F12, F14, F17, P5	Spare Parts (Clamp Screw)
SP3X6	M32, M33, P5	Spare Parts (Screw)
SP3X8	D38, E28, E29, J16, J17, M27, M31, M39, M41, N10, P5	Spare Parts (Screw)
SP3X10	F60, F61, F72, P5	Spare Parts (Screw)
SP4X9	M26, P5	Spare Parts (Clamp Screw)
SP8X35	M24, P5	Spare Parts (Clamp Bolt for BT50 Arbor)
SP-5	G48, P19	Spare Parts (Spring)
SP-6	G11, G16, G17, G45, P19	Spare Parts (Spring)
SP-8	G26, P19	Spare Parts (Spring)
SP-129	D34, D35, P9	Spare Parts (Shim)
SP-141	D25, D30, D31, D34, D35, P9	Spare Parts (Shim)
SP-143	D25, D34, D35, P9	Spare Parts (Shim)
SP-148	D34, D35, P9	Spare Parts (Shim)
SP-162	D25, D30, D31, P9	Spare Parts (Shim)
SP-219	D36, P9	Spare Parts (Shim)
SP-221	D26, P10	Spare Parts (Shim)
SP-223	D26, P10	Spare Parts (Shim)
SP-342	D23, P10	Spare Parts (Shim)
SP-429	D32, P10	Spare Parts (Shim)
SP-441	D22, D28, P10	Spare Parts (Shim)
SP-443	D22, P10	Spare Parts (Shim)
SP-454	D22, P10	Spare Parts (Shim)
SP-521	D29, P10	Spare Parts (Shim)
SP-523	P10	Spare Parts (Shim)
SP-541	D29, P10	Spare Parts (Shim)
SP-543	P10	Spare Parts (Shim)
SP-826	D33, P10	Spare Parts (Shim)
SP-829	D33, P10	Spare Parts (Shim)
SP-841	D27, D33, P10	Spare Parts (Shim)
SP-843	D27, D33, P10	Spare Parts (Shim)
SP-849	D33, P10	Spare Parts (Shim)
SP-861	D27, P10	Spare Parts (Shim)
SP-130A	F74, P10	Spare Parts (Shim)
SP-210A	F74, P10	Spare Parts (Shim)
SP-420A	F74, P10	Spare Parts (Shim)
SP-141P	F72, F73, P10	Spare Parts (Shim)
SP-143P	F72, P10	Spare Parts (Shim)
SP-230P	F72, P10	Spare Parts (Shim)
SP-341P	F72, P10	Spare Parts (Shim)
SP-441P	F73, P11	Spare Parts (Shim)
SP-443P	P11	Spare Parts (Shim)
SP-521P	F73, P11	Spare Parts (Shim)
SP-523P	P11	Spare Parts (Shim)
SPCN ○○○○EDTR	M11	Insert (Milling)
SPCN ○○○○EETR1	M11	Insert (Milling)
SPCN ○○○○XPTR	M11	Insert (Milling)
SPCT ○○T○○○□□-□□	M114	Insert (Milling)
SPCT ○○T○○○□□%-□□	M114	Insert (Milling)
SPEN ○○○○EESR	M11	Insert (Milling)
SPET ○○T○○○□□%-□□	M114	Insert (Milling)
SPGH ○○○○○○%/-	B58	Insert (Turning)
SPGN ○○○○○○	B58, B88, C15, C23, M11	Insert (Turning / Milling)
SPGN ○○○○○○NE	C23	Insert (Turning)
SPGN ○○○○○○S○○○○○	B88	Insert (Turning)

Description	Page	Category
SPGN ○○○○○○S○○○○○MET	<b>C15</b>	Insert (Turning)
SPGN ○○○○○○T○○○○○	<b>B88, C15</b>	Insert (Turning)
SPGR ○○○○○○%	<b>B58</b>	Insert (Turning)
SPKN ○○○○EDFR	<b>M11</b>	Insert (Milling)
SPKN ○○○○EDT%	<b>M11</b>	Insert (Milling)
SPKN ○○○○XETR	<b>M11</b>	Insert (Milling)
SPKN ○○○○XPFR	<b>M11</b>	Insert (Milling)
SPKN ○○○○XPT%	<b>M11</b>	Insert (Milling)
SPKR ○○○○EDER-S	<b>M11</b>	Insert (Milling)
SPMN ○○○○○○	<b>B58, B75, M11</b>	Insert (Turning)
SPMR ○○○○EDER-H	<b>M11</b>	Insert (Milling)
SPMR ○○○○○○	<b>B58</b>	Insert (Turning)
SPMR ○○○○○○G	<b>B58, B75</b>	Insert (Turning)
SPMT ○○○○EDER-NB□	<b>M14, M35</b>	Insert (Milling)
SPMT ○○○○□□□□-NB□□	<b>M14, M35</b>	Insert (Milling)
SPMT ○○○○□□□□-V	<b>M14, M35</b>	Insert (Milling)
SPMT ○○○○○○E-Z	<b>M15</b>	Insert (Milling)
SP-RC	<b>D38, P11</b>	Spare Parts (Shim)
SPUN ○○○○○○	<b>B58, M11</b>	Insert (Turning)
SPW-6045	<b>M42, P5</b>	Spare Parts (Screw)
SRCP%L ○○○○B-○○-A○○	<b>F71</b>	Boring Bar (for Bearing Machining)
SSKP%L ○○○○B-○○	<b>F60</b>	Boring Bar / Previous Description
STGC%L ○○○○□-○○	<b>E22</b>	Toolholder (Turning)
STGP%L ○○○○□-○○	<b>E22</b>	Toolholder (Turning)
STLNR ○○○○□-○○FF	<b>E5</b>	Toolholder (for Small Double-Sided Tools)
STUB%L ○○○○B-○○	<b>F54</b>	Boring Bar / Previous Description
STUB%L ○○○○B-○○E	<b>F54</b>	Boring Bar / Previous Description
STUB%L ○○○○B-○○W	<b>F55</b>	Boring Bar / Previous Description
STUP%L ○○○○B-○○	<b>F54</b>	Boring Bar / Previous Description
STUP%L ○○○○B-○○E	<b>F54</b>	Boring Bar / Previous Description
STUP%L ○○○○B-○○W	<b>F55</b>	Boring Bar / Previous Description
STUP%L ○○○○B-○○EH	<b>F56</b>	Boring Bar / Previous Description
STUP%L ○○○○B-○○WH	<b>F56</b>	Boring Bar / Previous Description
STUP%L ○○○○B-○○W-○/○	<b>F55</b>	Boring Bar / Previous Description
STW%L ○○○○□-15	<b>F9, G55</b>	Toolholder (for Twin Bar)
STWSR ○○○○□-15T	<b>F9, G55</b>	Toolholder (for Twin Bar)
STXB%L ○○○○B-○○W	<b>F58</b>	Boring Bar / Previous Description
STXP%L ○○○○B-○○W	<b>F58</b>	Boring Bar / Previous Description
STZB%L ○○○○B-○○W	<b>F58</b>	Boring Bar / Previous Description
SVJB%L ○○○○□-○○	<b>E24</b>	Toolholder (Turning)
SVJB%L ○○○○□-○○F	<b>E24</b>	Toolholder (Turning)
SVJB%L ○○○○□-○○N	<b>E24</b>	Toolholder (Turning)
SVJB%L ○○○○B-○○E	<b>F62</b>	Boring Bar / Previous Description
SVJC%L ○○○○B-○○E	<b>F62</b>	Boring Bar / Previous Description
SVJP%L ○○○○B-○○E	<b>F62</b>	Boring Bar / Previous Description
SVLP%L ○○○○□-○○F	<b>E25</b>	Toolholder (Turning)
SVLP%L ○○○○□-○○FF	<b>E25</b>	Toolholder (Turning)
SVNR ○○○○□-12	<b>F13</b>	Toolholder (for System Tip-Bar)
SVNR ○○○○□-12N	<b>F12</b>	Toolholder (for System Tip-Bar)
SS-4N	<b>E23, E24, F37, F39, F63, N9, P5</b>	Spare Parts (Shim Screw)
SVN-32	<b>N9, P11</b>	Spare Parts (Shim)
SVN-32N	<b>E23, E24, F37, F39, F63, N9, P11</b>	Spare Parts (Shim)
SVNSR ○○○○□-12-○○	<b>F13</b>	Toolholder (for System Tip-Bar)
SVNSR ○○○○□-12-○○N	<b>F12</b>	Toolholder (for System Tip-Bar)
SVNSR ○○○○□-12-○○XN	<b>F17</b>	Toolholder (for System Tip-Bar)
SVPB%L ○○○○□-○○	<b>E24</b>	Toolholder (Turning)
SVPB%L ○○○○□-○○N	<b>E24</b>	Toolholder (Turning)
SVPP%L ○○○○□-○○	<b>E26</b>	Toolholder (Turning)
SVPPR ○○○○□-○○FF	<b>E26</b>	Toolholder (Turning)
SVQB%L ○○○○B-○○E	<b>F62</b>	Boring Bar / Previous Description
SVQC%L ○○○○B-○○E	<b>F62</b>	Boring Bar / Previous Description
SVUB%L ○○○○B-○○E	<b>F63</b>	Boring Bar / Previous Description
SVUC%L ○○○○B-○○E	<b>F63</b>	Boring Bar / Previous Description
SVVBN ○○○○□-○○	<b>E23</b>	Toolholder (Turning)
SVVBN ○○○○□-○○N	<b>E23</b>	Toolholder (Turning)
SV-60136R	<b>M40, P6</b>	Spare Parts (Screw)
SV-60136TR	<b>M28, P6</b>	Spare Parts (Screw)
SWUB%L ○○○○B-○○	<b>F65</b>	Boring Bar / Previous Description
SWUB%L ○○○○B-○○E	<b>F65</b>	Boring Bar / Previous Description
SWUB%L ○○○○B-○○W	<b>F65</b>	Boring Bar / Previous Description
SWUB%L ○○○○B-○○-○○	<b>F65</b>	Boring Bar / Previous Description
SWUB%L ○○○○B-○○W-○/○	<b>F65</b>	Boring Bar / Previous Description
SWUP%L ○○○○B-○○E	<b>F65</b>	Boring Bar / Previous Description

Description	Page	Category
SWUP%L ○○○○B-○○W	<b>F65</b>	Boring Bar / Previous Description
SWUP%L ○○○○B-○○W-○/○	<b>F65</b>	Boring Bar / Previous Description
SYXP%L ○○○○□-○○F	<b>E27</b>	Toolholder (Turning)
<b>T</b>		
T63H- B○○○-○○(○)	<b>N12</b>	Blank Tool (HSK Tooling)
T63H- C○○-○○(○)	<b>N11</b>	Toolholder (HSK Tooling)
T63H- KGBA%-16	<b>N10</b>	Grooving (HSK Tooling)
T63H- KGBA%-22-○○	<b>N10</b>	Grooving (HSK Tooling)
T63H- KTNR-○○	<b>N10</b>	Threading (HSK Tooling)
T63H- N○○-○○(○)	<b>N11</b>	Toolholder (HSK Tooling)
T63H- PCLN%-DX12	<b>N6</b>	Toolholder (HSK Tooling)
T63H- PCMNN-□12	<b>N6</b>	Toolholder (HSK Tooling)
T63H- PDJN%-DX15	<b>N6</b>	Toolholder (HSK Tooling)
T63H- PDNNN-□15	<b>N7</b>	Toolholder (HSK Tooling)
T63H- PTGN%-DX16	<b>N7</b>	Toolholder (HSK Tooling)
T63H- PWLN%-DX08	<b>N8</b>	Toolholder (HSK Tooling)
T63H- S2525%-○○(○)	<b>N4</b>	Toolholder (HSK Tooling)
T63H- S2020R-105T	<b>N5</b>	Toolholder (HSK Tooling)
T63H- S2525-○○F	<b>N5</b>	Toolholder (HSK Tooling)
T63H- SVLB%-DX16N	<b>N9</b>	Toolholder (HSK Tooling)
T63H- SVVBN-□16N	<b>N9</b>	Toolholder (HSK Tooling)
T63H- WTENN-□16	<b>N7</b>	Toolholder (HSK Tooling)
T63H- WWMNN-□08	<b>N8</b>	Toolholder (HSK Tooling)
T100H- C○○-○○(○)	<b>N11</b>	Toolholder (HSK Tooling)
T100H- N○○-○○(○)	<b>N11</b>	Toolholder (HSK Tooling)
T100H- S2525-○○○F	<b>N5</b>	Toolholder (HSK Tooling)
T100H- S2525%-○○(○)	<b>N4</b>	Toolholder (HSK Tooling)
T100H- S2525R-○○○T	<b>N5</b>	Toolholder (HSK Tooling)
TBGN ○○○○○○	<b>B88, C15, C23</b>	Insert (Turning)
TBGN ○○○○○○S○○○○○	<b>B88</b>	Insert (Turning)
TBGN ○○○○○○T○○○○○	<b>B88, C15</b>	Insert (Turning)
TBGT ○○○○○○CF	<b>B59, B76</b>	Insert (Turning)
TBGT ○○○○○○(○)M%L	<b>B59</b>	Insert (Turning)
TBGT ○○○○○○M-CF	<b>B59</b>	Insert (Turning)
TBGT ○○○○○○MP-CF	<b>B59</b>	Insert (Turning)
TBGT ○○○○○○(○)%L	<b>B59, B76</b>	Insert (Turning)
TBGW ○○○○○○	<b>B59, B76, C19</b>	Insert (Turning)
TBGW ○○○○○○NE	<b>C19</b>	Insert (Turning)
TBMT ○○○○○○	<b>C19</b>	Insert (Turning)
TBMT ○○○○○○DP	<b>B59</b>	Insert (Turning)
TBMT ○○○○○○NE	<b>C19</b>	Insert (Turning)
TCET ○○○○○○(○)F%-USF	<b>B60</b>	Insert (Turning)
TCET ○○○○○○(○)MF%-USF	<b>B60</b>	Insert (Turning)
TCGN ○○○○○○	<b>B64, B88</b>	Insert (Turning)
TCGN ○○○○○○T○○○○○	<b>B88</b>	Insert (Turning)
TCGR ○○○○○○%-F	<b>B64</b>	Insert (Turning)
TCGT ○○○○○○E%-U	<b>B60, B76</b>	Insert (Turning)
TCGT ○○○○○○(○)F%-U	<b>B60, B76</b>	Insert (Turning)
TCGT ○○○○○○ME%-U	<b>B60</b>	Insert (Turning)
TCGT ○○○○○○(○)MF%-U	<b>B60</b>	Insert (Turning)
TCGT ○○○○○○%-A3	<b>B60</b>	Insert (Turning)
TCGW ○○○○○○	<b>B60, C19</b>	Insert (Turning)
TCGW ○○○○○○NE	<b>C19</b>	Insert (Turning)
TCGW ○○○○○○SE	<b>C19</b>	Insert (Turning)
TCMT ○○○○○○	<b>C19, C20</b>	Insert (Turning)
TCMT ○○○○○○HQ	<b>B59, B76</b>	Insert (Turning)
TCMT ○○○○○○NE	<b>C19, C20</b>	Insert (Turning)
TCMT ○○○○○○SE	<b>C20</b>	Insert (Turning)
TCMW ○○○○○○SE	<b>C11</b>	Insert (Turning) / Previous Description
TCMW ○○○○○○T○○○○○SE	<b>C11</b>	Insert (Turning)
TEEN ○○○○PTFR	<b>C27, M21</b>	Insert (Milling)
TEEN ○○○○PTFR-NE	<b>C27, M21</b>	Insert (Milling)
TEEN ○○○○PTTR	<b>M12</b>	Insert (Milling)
TEKN ○○○○PTFR	<b>C27, M12, M21</b>	Insert (Milling)
TEKN ○○○○PTFR-NE	<b>C27, M21</b>	Insert (Milling)
TEKN ○○○○PTTR	<b>M12</b>	Insert (Milling)
TEKR ○○○○PTFR-S	<b>M12</b>	Insert (Milling)
TEMR ○○○○PTFR-H	<b>M12</b>	Insert (Milling)
TEMT ○○○○○○AQ	<b>M15</b>	Insert (Milling)
TG ○○%L○○○	<b>G15, G44</b>	Insert (Grooving)
TGF ○○%L○○○	<b>C24, G14</b>	Insert (Grooving)
TGF ○○%L○○○-○○○	<b>G14, C24</b>	Insert (Grooving)

# Description Index

○ : Figure, □ : Alphabet

Description	Page	Category
TGF ○○%S○○○-S	<b>G14</b>	Insert (Grooving)
TGF ○○%S○○○-SRG	<b>G14</b>	Insert (Grooving)
TH-4	<b>P18</b>	Spare Parts (Hexagon Wrench / T-shape type)
TH8X15	<b>M31, M32, M33, M39, P6</b>	Spare Parts (Screw)
TKN ○	<b>H15</b>	Insert (Cut-Off)
TKN ○-P	<b>H15</b>	Insert (Cut-Off)
TK%L ○	<b>H15</b>	Insert (Cut-Off)
TK%L ○-P	<b>H15</b>	Insert (Cut-Off)
TKF ○○%L○○○-NB(○○)	<b>C25, H7</b>	Insert (Grooving / Cut-Off)
TKF ○○%L○○○-NB-○○DR	<b>H7</b>	Insert (Cut-Off)
TKF ○○%L○○○-S	<b>H7</b>	Insert (Cut-Off)
TKF ○○%L○○○-S-○○DR	<b>H7</b>	Insert (Cut-Off)
TKFB ○○R○○○○○M	<b>B72, E6</b>	Insert (Back turning)
TKFS ○○%L○○○-S	<b>H9</b>	Insert (Cut-Off)
TKFT 12%L□□□□(□)	<b>J18</b>	Insert (Threading)
TH-3L	<b>M112, M113</b>	Spare Parts (Wrench)
TN-32	<b>J16, J17, N10, P11</b>	Spare Parts (Shim)
TN-43	<b>J16, J17, N10, P11</b>	Spare Parts (Shim)
TNEG ○○○○○○%L-SSF	<b>B32</b>	Insert (Turning)
TNGA ○○○○○○	<b>B31, B86, C7</b>	Insert (Turning)
TNGA ○○○○○○ME	<b>C7</b>	Insert (Turning) / Previous Description
TNGA ○○○○○○SE	<b>C7</b>	Insert (Turning) / Previous Description
TNGA ○○○○○○ME-T	<b>C7</b>	Insert (Turning) / Previous Description
TNGA ○○○○○○SE-T	<b>C7</b>	Insert (Turning) / Previous Description
TNGA ○○○○○○S○○○○○	<b>B86, C7</b>	Insert (Turning)
TNGA ○○○○○○S○○○○○ME	<b>C7</b>	Insert (Turning)
TNGA ○○○○○○S○○○○○MET	<b>C7</b>	Insert (Turning)
TNGA ○○○○○○S○○○○○SE	<b>C7</b>	Insert (Turning)
TNGA ○○○○○○S○○○○○SET	<b>C7</b>	Insert (Turning)
TNGA ○○○○○○T○○○○○	<b>B86, C7</b>	Insert (Turning)
TNGA ○○○○○○T○○○○○ME	<b>C7</b>	Insert (Turning)
TNGA ○○○○○○T○○○○○SE	<b>C7</b>	Insert (Turning)
TNGA ○○○○○○-T○○	<b>B86</b>	Insert (Turning)
TNGG ○○○○○○AH	<b>B31</b>	Insert (Turning)
TNGG ○○○○○○ODP	<b>B28</b>	Insert (Turning)
TNGG ○○○○○○%L	<b>B32, B43</b>	Insert (Turning)
TNGG ○○○○○○%L-25R	<b>B32, B43</b>	Insert (Turning)
TNGG ○○○○○○%L-A3	<b>B31</b>	Insert (Turning)
TNGG ○○○○○○%L-B/C/D	<b>B32, B43</b>	Insert (Turning)
TNGG ○○○○○○%L-S	<b>B32, B43</b>	Insert (Turning)
TNGG ○○○○○○%L-Y	<b>B43</b>	Insert (Turning)
TNGM ○○○○○○BB○	<b>C7</b>	Insert (Turning) / Previous Description
TNGM ○○○○○○S○○○○○BB○	<b>C7</b>	Insert (Turning)
TNGN ○○○○○○	<b>B31, B86, B87</b>	Insert (Turning)
TNGN ○○○○○○S○○○○○	<b>B86, B87</b>	Insert (Turning)
TNGN ○○○○○○T○○○○○	<b>B86, B87</b>	Insert (Turning)
TNGN ○○○○○○-T○○	<b>B86</b>	Insert (Turning)
TNGU ○○○○○○ME%L-U	<b>B39</b>	Insert (Turning)
TNGU ○○○○○○(○)MF%L-F	<b>B39</b>	Insert (Turning)
TNGU ○○○○○○(○)MF%L-U	<b>B39</b>	Insert (Turning)
TNMA ○○○○○○	<b>B31, B43</b>	Insert (Turning)
TNMG ○○○○○○	<b>B29, B42</b>	Insert (Turning)
TNMG ○○○○○○AH	<b>B31</b>	Insert (Turning)
TNMG ○○○○○○C	<b>B31</b>	Insert (Turning)
TNMG ○○○○○○CQ	<b>B28, B42</b>	Insert (Turning)
TNMG ○○○○○○CS	<b>B28, B42</b>	Insert (Turning)
TNMG ○○○○○○ODP	<b>B28</b>	Insert (Turning)
TNMG ○○○○○○GC	<b>B31</b>	Insert (Turning)
TNMG ○○○○○○GP	<b>B28, B42</b>	Insert (Turning)
TNMG ○○○○○○GS	<b>B28, B42</b>	Insert (Turning)
TNMG ○○○○○○GT	<b>B29, B42</b>	Insert (Turning)
TNMG ○○○○○○GU	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○HK	<b>B28</b>	Insert (Turning)
TNMG ○○○○○○HQ	<b>B28, B42</b>	Insert (Turning)
TNMG ○○○○○○HS	<b>B29, B42</b>	Insert (Turning)
TNMG ○○○○○○HT	<b>B29, B42</b>	Insert (Turning)
TNMG ○○○○○○HU	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○MQ	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○MS	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○MU	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○PH	<b>B29</b>	Insert (Turning)
TNMG ○○○○○○PS	<b>B28</b>	Insert (Turning)
TNMG ○○○○○○PT	<b>B29</b>	Insert (Turning)

Description	Page	Category
TNMG ○○○○○○PX	<b>B29</b>	Insert (Turning)
TNMG ○○○○○○TK	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○%L-C	<b>B32, B43</b>	Insert (Turning)
TNMG ○○○○○○%L-ST	<b>B30</b>	Insert (Turning)
TNMG ○○○○○○XP	<b>B29, B43</b>	Insert (Turning)
TNMG ○○○○○○XP-T	<b>B29, B43</b>	Insert (Turning)
TNMG ○○○○○○XQ	<b>B30, B43</b>	Insert (Turning)
TNMG ○○○○○○XS	<b>B30, B43</b>	Insert (Turning)
TNMG ○○○○○○ZS	<b>B31</b>	Insert (Turning)
TNMM ○○○○○○M	<b>C17</b>	Insert (Turning)
TNMM ○○○○○○M-NE	<b>C17</b>	Insert (Turning)
TNMM ○○○○○○M-SE	<b>C17</b>	Insert (Turning)
TNMM ○○○○○○PX	<b>B28</b>	Insert (Turning)
TNMMN ○○○○○○	<b>B31, C9</b>	Insert (Turning)
TNMMN ○○○○○○S○○○○○	<b>C9</b>	Insert (Turning)
TNMP ○○○○○○TK	<b>B28, B42</b>	Insert (Turning)
TNN ○○E%L○○W	<b>J8</b>	Insert (Threading / Previous description)
TNN ○○E%L○○PT	<b>J10</b>	Insert (Threading / Previous description)
TNN ○○E%L○○UN	<b>J8</b>	Insert (Threading / Previous description)
TNN ○○E%L○○NPT	<b>J10</b>	Insert (Threading / Previous description)
TNN ○○E%L○○PT-TS	<b>J10</b>	Insert (Threading / Previous description)
TNN ○○E%L○○W-TS	<b>J8</b>	Insert (Threading / Previous description)
TNN ○○E%L○○○M	<b>J6</b>	Insert (Threading / Previous description)
TNN ○○E%L○○○M02	<b>J6</b>	Insert (Threading / Previous description)
TNN ○○E%L○○○M-TS	<b>J6</b>	Insert (Threading / Previous description)
TNN ○○E%L○○○TR	<b>J14</b>	Insert (Threading / Previous description)
TNN ○○E%L○○○○	<b>J12</b>	Insert (Threading / Previous description)
TNN ○○E%L○○○○-TS	<b>J12</b>	Insert (Threading / Previous description)
TNN ○○I%L○○W	<b>J9</b>	Insert (Threading / Previous description)
TNN ○○I%L○○PT	<b>J11</b>	Insert (Threading / Previous description)
TNN ○○I%L○○UN	<b>J9</b>	Insert (Threading / Previous description)
TNN ○○I%L○○NPT	<b>J11</b>	Insert (Threading / Previous description)
TNN ○○I%L○○PT-TS	<b>J11</b>	Insert (Threading / Previous description)
TNN ○○I%L○○W-TS	<b>J9</b>	Insert (Threading / Previous description)
TNN ○○I%L○○○M	<b>J7</b>	Insert (Threading / Previous description)
TNN ○○I%L○○○M-TS	<b>J7</b>	Insert (Threading / Previous description)
TNN ○○I%L○○○TR	<b>J15</b>	Insert (Threading / Previous description)
TNN ○○I%L○○○○(○)	<b>J13, J15</b>	Insert (Threading / Previous description)
TNN ○○I%L○○○○(○)-TS	<b>J13</b>	Insert (Threading / Previous description)
TNW-32	<b>J16, N10, P11</b>	Spare Parts (Shim)
TPET ○○○○○○(○)F%L-USF	<b>B63</b>	Insert (Turning)
TPET ○○○○○○(○)M%L-FSF	<b>B63</b>	Insert (Turning)
TPET ○○○○○○(○)MF%L-USF	<b>B63</b>	Insert (Turning)
TPET ○○○○○○(○)%L-FSF	<b>B63</b>	Insert (Turning)
TPGB ○○○○○○(○)	<b>B63, B76, C12, C20, J28</b>	Insert (Turning / Threading)
TPGB ○○○○○○ME	<b>C12</b>	Insert (Turning) / Previous Description
TPGB ○○○○○○ME-T	<b>C12</b>	Insert (Turning) / Previous Description
TPGB ○○○○○○NE	<b>C20</b>	Insert (Turning)
TPGB ○○○○○○SE	<b>C12, C20</b>	Insert (Turning)
TPGB ○○○○○○SE-T	<b>C12</b>	Insert (Turning) / Previous Description
TPGB ○○○○○○S○○○○○MET	<b>C12</b>	Insert (Turning)
TPGB ○○○○○○S○○○○○SET	<b>C12</b>	Insert (Turning)
TPGB ○○○○○○T○○○○○	<b>C12</b>	Insert (Turning)
TPGB ○○○○○○T○○○○○ME	<b>C12</b>	Insert (Turning)
TPGB ○○○○○○T○○○○○SE	<b>C12</b>	Insert (Turning)
TPGH ○○○○○○M%L	<b>B62</b>	Insert (Turning)
TPGH ○○○○○○M%L-H	<b>B62</b>	Insert (Turning)
TPGH ○○○○○○%L	<b>B62, B76</b>	Insert (Turning)
TPGH ○○○○○○%L-H	<b>B62, B76</b>	Insert (Turning)
TPGN ○○○○○○	<b>B65, B77, B88, C15, C23, M12, M21</b>	Insert (Turning / Milling)
TPGN ○○○○○○ME	<b>C15</b>	Insert (Turning) / Previous Description
TPGN ○○○○○○NE	<b>C23, M21</b>	Insert (Turning / Milling)
TPGN ○○○○○○SE	<b>C15, C23</b>	Insert (Turning)
TPGN ○○○○○○SE-T	<b>C15</b>	Insert (Turning) / Previous Description
TPGN ○○○○○○S○○○○○	<b>B88</b>	Insert (Turning)
TPGN ○○○○○○S○○○○○SET	<b>C15</b>	Insert (Turning)
TPGN ○○○○○○T○○○○○	<b>B88, C15, M21</b>	Insert (Turning / Milling)
TPGN ○○○○○○T○○○○○ME	<b>C15</b>	Insert (Turning)
TPGN ○○○○○○T○○○○○SE	<b>C15</b>	Insert (Turning)
TPGR ○○○○○○%L-A/B/C	<b>B64, B77</b>	Insert (Turning)
TPGR ○○○○○○%L-F	<b>B64</b>	Insert (Turning)
TPGT ○○○○○○CF	<b>B61, B76</b>	Insert (Turning)
TPGT ○○○○○○M-CF	<b>B61</b>	Insert (Turning)
TPGT ○○○○○○MP-CF	<b>B61</b>	Insert (Turning)

S



Index



Description	Page	Category
TPGW ○○○○○○ME	<b>C13</b>	Insert (Turning) / Previous Description
TPGW ○○○○○○ME-T	<b>C13</b>	Insert (Turning) / Previous Description
TPGW ○○○○○○SE	<b>C13</b>	Insert (Turning) / Previous Description
TPGW ○○○○○○SE-T	<b>C13</b>	Insert (Turning) / Previous Description
TPGW ○○○○○○S○○○○○MET	<b>C13</b>	Insert (Turning)
TPGW ○○○○○○S○○○○○SET	<b>C13</b>	Insert (Turning)
TPGW ○○○○○○T○○○○○ME	<b>C13</b>	Insert (Turning)
TPGW ○○○○○○T○○○○○SE	<b>C13</b>	Insert (Turning)
TPKN ○○○○PDFR	<b>M12</b>	Insert (Milling)
TPKN ○○○○PDTR	<b>M12</b>	Insert (Milling)
TPKR ○○○○PDER-S	<b>M12</b>	Insert (Milling)
TPMH ○○○○○○	<b>C21</b>	Insert (Turning)
TPMH ○○○○○○NE	<b>C21</b>	Insert (Turning)
TPMH ○○○○○○SE	<b>C21</b>	Insert (Turning)
TPMH ○○○○○○%-NE	<b>C21</b>	Insert (Turning)
TPMN ○○○○○○	<b>B65, B77, M12</b>	Insert (Turning) / Milling)
TPMR ○○○○PDER-H	<b>M12</b>	Insert (Milling)
TPMR ○○○○○○	<b>B64, B77</b>	Insert (Turning)
TPMR ○○○○○○DP	<b>B64, B77</b>	Insert (Turning)
TPMR ○○○○○○G	<b>B64, B77</b>	Insert (Turning)
TPMR ○○○○○○GP	<b>B64, B77</b>	Insert (Turning)
TPMR ○○○○○○HQ	<b>B64, B77</b>	Insert (Turning)
TPMT ○○○○○○GP	<b>B61, B76</b>	Insert (Turning)
TPMT ○○○○○○HQ	<b>B61, B76</b>	Insert (Turning)
TPMT ○○○○○○XP	<b>B61, B76</b>	Insert (Turning)
TPMT ○○○○○○XQ	<b>B61, B76</b>	Insert (Turning)
TS-3S	<b>D17, P7</b>	Spare Parts (Lock Pin)
TT 43E%L○○○M	<b>J22</b>	Insert (Threading)
TT ○○%L○○○○	<b>J22, J23</b>	Insert (Threading)
TT-25	<b>M120, P18</b>	Spare Parts (Trox Wrench / T-shape type)
TT-30	<b>M120, P18</b>	Spare Parts (Trox Wrench / T-shape type)
TT-15L	<b>M101</b>	Spare Parts (Trox Wrench / T-shape type)
TT-25L	<b>M38, M62, M63, P18</b>	Spare Parts (Trox Wrench / T-shape type)
TTC-20	<b>M25, M28, P18</b>	Spare Parts (Trox Wrench / T-shape type)
TTC-25	<b>M26, M40, P18</b>	Spare Parts (Trox Wrench / T-shape type)
TTX 32R○○○○(○)	<b>J21</b>	Insert (Threading)
TTX 32R○○○○(○)S	<b>J21</b>	Insert (Threading)
TWBR ○○○○○-○○○	<b>F8</b>	Twin Bar (Turning)
TWBTR ○○○○○-○○○	<b>F8</b>	Twin Bar (Turning)
TWFG L	<b>G54</b>	Twin Bar (Grooving)
TWFGTR ○○○	<b>G54</b>	Twin Bar (Grooving)

## V

VBET ○○○○○○(○)M%-FSF	<b>B66</b>	Insert (Turning)
VBET ○○○○○○(○)%-FSF	<b>B66</b>	Insert (Turning)
VBGT ○○○○○○FN-Z	<b>B66</b>	Insert (Turning)
VBGT ○○○○○○(○)M%-F	<b>B66</b>	Insert (Turning)
VBGT ○○○○○○(○)M%-Y	<b>B67</b>	Insert (Turning)
VBGT ○○○○○○(○)%-F	<b>B66, B77</b>	Insert (Turning)
VBGT ○○○○○○(○)%-Y	<b>B67, B77</b>	Insert (Turning)
VBGW ○○○○○○ME	<b>C13</b>	Insert (Turning) / Previous Description
VBGW ○○○○○○ME-T	<b>C13</b>	Insert (Turning) / Previous Description
VBGW ○○○○○○SE	<b>C13</b>	Insert (Turning) / Previous Description
VBGW ○○○○○○SE-T	<b>C13</b>	Insert (Turning) / Previous Description
VBGW ○○○○○○S○○○○○MET	<b>C13</b>	Insert (Turning)
VBGW ○○○○○○S○○○○○SET	<b>C13</b>	Insert (Turning)
VBGW ○○○○○○T○○○○○ME	<b>C13</b>	Insert (Turning)
VBGW ○○○○○○T○○○○○SE	<b>C13</b>	Insert (Turning)
VBMT ○○○○○○	<b>C22</b>	Insert (Turning)
VBMT ○○○○○○GP	<b>B66, B77</b>	Insert (Turning)
VBMT ○○○○○○HQ	<b>B66, B77</b>	Insert (Turning)
VBMT ○○○○○○NE	<b>C22</b>	Insert (Turning)
VBMT ○○○○○○SE	<b>C22</b>	Insert (Turning)
VBMT ○○○○○○VF	<b>B66, B77</b>	Insert (Turning)
VCGT ○○○○○○	<b>B67</b>	Insert (Turning)
VCGT ○○○○○○AH	<b>B67</b>	Insert (Turning)
VCGT ○○○○○○FN-Z	<b>B67</b>	Insert (Turning)
VCGT ○○○○○○%-A3	<b>B67</b>	Insert (Turning)
VCGW ○○○○○○ME	<b>C14</b>	Insert (Turning) / Previous Description
VCGW ○○○○○○ME-T	<b>C14</b>	Insert (Turning) / Previous Description
VCGW ○○○○○○SE	<b>C14</b>	Insert (Turning) / Previous Description
VCGW ○○○○○○SE-T	<b>C14</b>	Insert (Turning) / Previous Description
VCGW ○○○○○○S○○○○○MET	<b>C14</b>	Insert (Turning)
VCGW ○○○○○○S○○○○○SET	<b>C14</b>	Insert (Turning)
VCGW ○○○○○○T○○○○○ME	<b>C14</b>	Insert (Turning)
VCGW ○○○○○○T○○○○○SE	<b>C14</b>	Insert (Turning)

Description	Page	Category
VCMT ○○○○○○	<b>C22</b>	Insert (Turning)
VCMT ○○○○○○HQ	<b>B67, B77</b>	Insert (Turning)
VCMT ○○○○○○NE	<b>C22</b>	Insert (Turning)
VCMT ○○○○○○VF	<b>B67, B77</b>	Insert (Turning)
VNBR ○○○○-○○(○)	<b>F11</b>	System Tip-Bar (Boring)
VNBR ○○○○-○○(○)S	<b>F10</b>	System Tip-Bar (Boring)
VNBR ○○○○-○○(○)NB	<b>C26, F11</b>	System Tip-Bar (Boring)
VNBTR ○○○○-○○(○)	<b>F11</b>	System Tip-Bar (Boring)
VNBXR ○○○○-○○(○)S	<b>F16</b>	System Tip-Bar (Boring)
VNFR ○○○○-○○	<b>G56</b>	System Tip-Bar (Grooving)
VNFR ○○○○-○○NB	<b>C26, G56</b>	System Tip-Bar (Grooving)
VNGR ○○○○-○○	<b>G33</b>	System Tip-Bar (Grooving)
VNGR ○○○○-○○NB	<b>C26, G33</b>	System Tip-Bar (Grooving)
VNGA ○○○○○○	<b>B34, B87, C8</b>	Insert (Turning)
VNGA ○○○○○○ME	<b>C8</b>	Insert (Turning) / Previous Description
VNGA ○○○○○○ME-T	<b>C8</b>	Insert (Turning) / Previous Description
VNGA ○○○○○○SE	<b>C8</b>	Insert (Turning) / Previous Description
VNGA ○○○○○○SE-T	<b>C8</b>	Insert (Turning) / Previous Description
VNGA ○○○○○○S○○○○○	<b>B87, C8</b>	Insert (Turning)
VNGA ○○○○○○S○○○○○ME	<b>C8</b>	Insert (Turning)
VNGA ○○○○○○S○○○○○MET	<b>C8</b>	Insert (Turning)
VNGA ○○○○○○S○○○○○SE	<b>C8</b>	Insert (Turning)
VNGA ○○○○○○S○○○○○SET	<b>C8</b>	Insert (Turning)
VNGA ○○○○○○T○○○○○	<b>B87, C8</b>	Insert (Turning)
VNGA ○○○○○○T○○○○○ME	<b>C8</b>	Insert (Turning)
VNGA ○○○○○○T○○○○○SE	<b>C8</b>	Insert (Turning)
VNGG ○○○○○○%L	<b>B34, B43</b>	Insert (Turning)
VNMA ○○○○○○	<b>B87</b>	Insert (Turning)
VNMA ○○○○○○S○○○○○	<b>B87</b>	Insert (Turning)
VNMG ○○○○○○	<b>B33, B43</b>	Insert (Turning)
VNMG ○○○○○○DP	<b>B33</b>	Insert (Turning)
VNMG ○○○○○○GP	<b>B33, B43</b>	Insert (Turning)
VNMG ○○○○○○GU	<b>B34</b>	Insert (Turning)
VNMG ○○○○○○HQ	<b>B33, B43</b>	Insert (Turning)
VNMG ○○○○○○MQ	<b>B34</b>	Insert (Turning)
VNMG ○○○○○○MS	<b>B34</b>	Insert (Turning)
VNMG ○○○○○○MU	<b>B34</b>	Insert (Turning)
VNMG ○○○○○○TN-V	<b>B33</b>	Insert (Turning)
VNMG ○○○○○○VF	<b>B33</b>	Insert (Turning)
VNMG ○○○○○○XP	<b>B33, B43</b>	Insert (Turning)
VNMM ○○○○○○M	<b>C17</b>	Insert (Turning)
VNMM ○○○○○○M-NE	<b>C17</b>	Insert (Turning)
VNMM ○○○○○○M-SE	<b>C17</b>	Insert (Turning)
VNTR ○○○-○○	<b>J27</b>	System Tip-Bar (Threading)
VPET ○○○○○○(○)F%-USF	<b>B69</b>	Insert (Turning)
VPET ○○○○○○(○)M%-FSF	<b>B69</b>	Insert (Turning)
VPET ○○○○○○(○)MF%-USF	<b>B69</b>	Insert (Turning)
VPET ○○○○○○(○)RL-FSF	<b>B69</b>	Insert (Turning)
VPGT ○○○○○○CF	<b>B68, B77</b>	Insert (Turning)
VPGT ○○○○○○CK	<b>B68</b>	Insert (Turning)
VPGT ○○○○○○F%-U	<b>B77</b>	Insert (Turning)
VPGT ○○○○○○M-CF	<b>B68</b>	Insert (Turning)
VPGT ○○○○○○M-CK	<b>B68</b>	Insert (Turning)
VPGT ○○○○○○MF-GF	<b>B68</b>	Insert (Turning)
VPGT ○○○○○○MFP-GF	<b>B68</b>	Insert (Turning)
VPGT ○○○○○○MP-CF	<b>B68</b>	Insert (Turning)
VPGT ○○○○○○MP-CK	<b>B68</b>	Insert (Turning)

## W

W-6	<b>G16, G45, P19</b>	Spare Parts (Washer)
W-8	<b>G26, P19</b>	Spare Parts (Washer)
W6-14	<b>P19</b>	Spare Parts (Washer)
W6X17	<b>M28, P6</b>	Spare Parts (Screw)
W6X18	<b>M112, M113</b>	Spare Parts (Wedge Lock Screw)
W6X20	<b>M112, M113</b>	Spare Parts (Wedge Lock Screw)
W8X16	<b>M40, P6</b>	Spare Parts (Screw)
W8X18	<b>M41, P6</b>	Spare Parts (Screw)
W8X21	<b>M25, P6</b>	Spare Parts (Wedge Lock Screw)
WB-5	<b>F76, P19</b>	Spare Parts (Washer)
WB-6	<b>F76, P19</b>	Spare Parts (Washer)
WB-8	<b>F76, P19</b>	Spare Parts (Washer)
WBG T ○○○○○○M%-CF	<b>B70</b>	Insert (Turning)
WBG T ○○○○○○(○)M%-F	<b>B70</b>	Insert (Turning)
WBG T ○○○○○○(○)%-F	<b>B70, B78</b>	Insert (Turning)
WBG T ○○○○○○MP%-CF	<b>B70</b>	Insert (Turning)
WBGW ○○○○○○%L	<b>B70</b>	Insert (Turning)
WBGW ○○○○○○%-SE	<b>C14</b>	Insert (Turning) / Previous Description
WBGW ○○○○○○%-SE-T	<b>C14</b>	Insert (Turning) / Previous Description

Description	Page	Category
WBGW ○○○○○○S○○○○○%-SET	<b>C14</b>	Insert (Turning)
WBGW ○○○○○○T○○○○○%-SE	<b>C14</b>	Insert (Turning)
WBMT ○○○○○○L-NE	<b>C22</b>	Insert (Turning)
WBMT ○○○○○○L	<b>C22</b>	Insert (Turning)
WBMT ○○○○○○%-DP	<b>B70, B78</b>	Insert (Turning)
WC- ○○	<b>M112, M113</b>	Spare Parts (Wedge)
WCGT ○○○○○○%-F	<b>B70</b>	Insert (Turning)
WCMT ○○○○○○	<b>M15</b>	Insert (Turning)
WCS-1N	<b>D15, N7, P15</b>	Spare Parts (Clamp Set)
WCS-8	<b>D20, F70, N8, P15</b>	Spare Parts (Clamp Set)
WDRCO(○)	<b>K9</b>	Spare Parts (Wrench / for "Magic Drill DRC")
WN-1	<b>D15, D20, N7, N8, P19</b>	Spare Parts (Shim Nut)
WNGA ○○○○○○	<b>B87</b>	Insert (Turning) / Previous Description
WNGA ○○○○○○OME	<b>C8</b>	Insert (Turning) / Previous Description
WNGA ○○○○○○ME-T	<b>C8</b>	Insert (Turning) / Previous Description
WNGA ○○○○○○SE	<b>C8</b>	Insert (Turning) / Previous Description
WNGA ○○○○○○SE-T	<b>C8</b>	Insert (Turning) / Previous Description
WNGA ○○○○○○S○○○○○	<b>B87</b>	Insert (Turning)
WNGA ○○○○○○S○○○○○OME	<b>C8</b>	Insert (Turning)
WNGA ○○○○○○S○○○○○MET	<b>C8</b>	Insert (Turning)
WNGA ○○○○○○S○○○○○SE	<b>C8</b>	Insert (Turning)
WNGA ○○○○○○S○○○○○SET	<b>C8</b>	Insert (Turning)
WNGA ○○○○○○T○○○○○	<b>B87</b>	Insert (Turning)
WNGA ○○○○○○T○○○○○OME	<b>C8</b>	Insert (Turning)
WNGG ○○○○○○AH	<b>B37</b>	Insert (Turning)
WNGG ○○○○○○%	<b>B37, B44</b>	Insert (Turning)
WNGG ○○○○○○%-S	<b>B37, B44</b>	Insert (Turning)
WNMA ○○○○○○	<b>B37, B44</b>	Insert (Turning)
WNMG ○○○○○○	<b>B36, B44</b>	Insert (Turning)
WNMG ○○○○○○C	<b>B37</b>	Insert (Turning)
WNMG ○○○○○○CJ	<b>B35</b>	Insert (Turning)
WNMG ○○○○○○CQ	<b>B35, B44</b>	Insert (Turning)
WNMG ○○○○○○CS	<b>B35, B44</b>	Insert (Turning)
WNMG ○○○○○○GC	<b>B37</b>	Insert (Turning)
WNMG ○○○○○○GP	<b>B35, B44</b>	Insert (Turning)
WNMG ○○○○○○GS	<b>B35, B44</b>	Insert (Turning)
WNMG ○○○○○○GT	<b>B36, B44</b>	Insert (Turning)
WNMG ○○○○○○GU	<b>B36</b>	Insert (Turning)
WNMG ○○○○○○HQ	<b>B35, B44</b>	Insert (Turning)
WNMG ○○○○○○HS	<b>B36, B44</b>	Insert (Turning)
WNMG ○○○○○○HT	<b>B36, B44</b>	Insert (Turning)
WNMG ○○○○○○HU	<b>B36</b>	Insert (Turning)
WNMG ○○○○○○MQ	<b>B37</b>	Insert (Turning)
WNMG ○○○○○○MS	<b>B37</b>	Insert (Turning)
WNMG ○○○○○○MU	<b>B37</b>	Insert (Turning)
WNMG ○○○○○○PS	<b>B36</b>	Insert (Turning)
WNMG ○○○○○○PT	<b>B36</b>	Insert (Turning)
WNMG ○○○○○○TK	<b>B37</b>	Insert (Turning)
WNMG ○○○○○○WP	<b>B35</b>	Insert (Turning)
WNMG ○○○○○○WQ	<b>B35, B44</b>	Insert (Turning)
WNMG ○○○○○○XP	<b>B36, B44</b>	Insert (Turning)
WNMG ○○○○○○XQ	<b>B36, B44</b>	Insert (Turning)
WNMG ○○○○○○XS	<b>B36, B44</b>	Insert (Turning)
WNMG ○○○○○○ZS	<b>B37</b>	Insert (Turning)
WNMM ○○○○○○M	<b>C17</b>	Insert (Turning)
WNMM ○○○○○○M-NE	<b>C17</b>	Insert (Turning)
WNMM ○○○○○○M-SE	<b>C17</b>	Insert (Turning)
WNMP ○○○○○○TK	<b>B35</b>	Insert (Turning)
WOF07R	<b>M25</b>	Spare Parts (Cartridge)
WP-1S	<b>D15, N7, P7</b>	Spare Parts (Shim Pin)
WP5X11	<b>F70, P7</b>	Spare Parts (Shim Pin)
WP5X15	<b>D20, N8, P7</b>	Spare Parts (Shim Pin)
WPGT ○○○○○○M%-Y	<b>B71</b>	Insert (Turning)
WPGT ○○○○○○%-Y	<b>B71, B78</b>	Insert (Turning)
WPGW ○○○○○○	<b>B71</b>	Insert (Turning)
WPMT ○○○○○○	<b>C22</b>	Insert (Turning)
WPMT ○○○○○○GP	<b>B71, B78</b>	Insert (Turning)
WPMT ○○○○○○HQ	<b>B71, B78</b>	Insert (Turning)
WPMT ○○○○○○NE	<b>C22</b>	Insert (Turning)
WSP-1	<b>D15, N7, P19</b>	Spare Parts (Spacer)
WTENN ○○○○□-○○N	<b>D15</b>	Toolholder (Turning)
WTJN% ○○○○□-○○N	<b>D15</b>	Toolholder (Turning)

Description	Page	Category
WTKN% ○○○○□-○○N	<b>D15</b>	Toolholder (Turning)
WTN-33	<b>D15, N7, P11</b>	Spare Parts (Shim)
WTN-33-20	<b>D15, P11</b>	Spare Parts (Shim)
WWLN% ○○○○□-○○	<b>D20</b>	Toolholder (Turning)
WWLN% ○○○○B-○○E	<b>F70</b>	Boring Bar / Previous Description
WWN-42	<b>D20, N8, P11</b>	Spare Parts (Shim)
WWP-42	<b>F70, P11</b>	Spare Parts (Shim)
WWP-42-16	<b>F70, P11</b>	Spare Parts (Shim)
<b>Y</b>		
YPGT ○○○○○○F%-U	<b>B78</b>	Insert (Turning)
YPGT ○○○○○○%-F	<b>B78</b>	Insert (Turning)
<b>Z</b>		
ZCMT ○○○○○○	<b>K37</b>	Insert (Drilling)
ZCMT ○○○○○○SP	<b>K37</b>	Insert (Drilling)
ZCMT ○○○○○○SU	<b>K37</b>	Insert (Drilling)
ZXMT ○○○○○○GM	<b>K22</b>	Insert (Drilling)
ZXMT ○○○○○○GH	<b>K22</b>	Insert (Drilling)
ZXMT ○○○○○○SM	<b>K22</b>	Insert (Drilling)